




MEDWAY TIDEWAY KLEIDERSCHRANK MIT 3 TÜREN

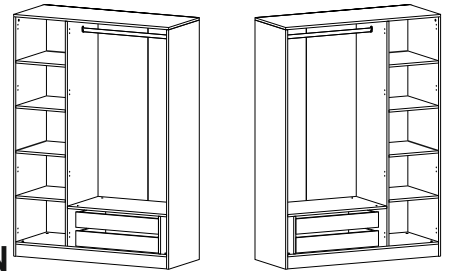

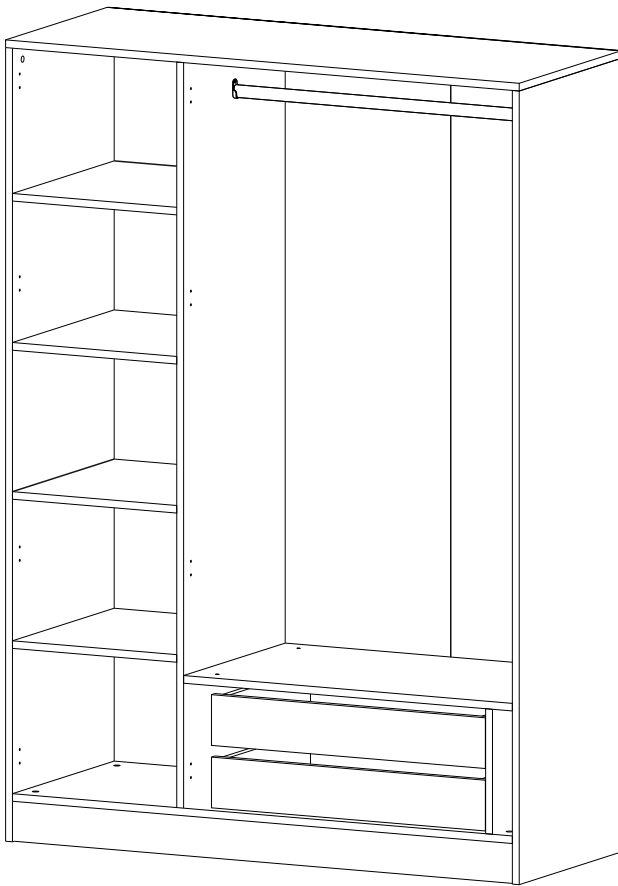















V1

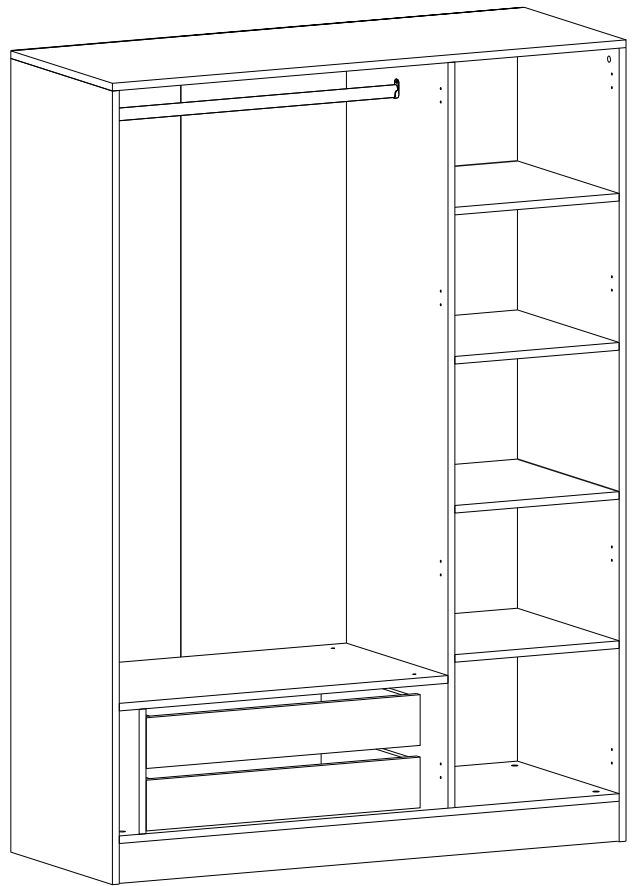


V2

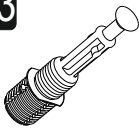

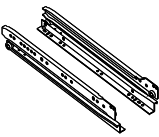
MONTAGE ZUBEHÖRTEILE

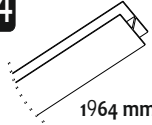A23  38x	A22  38x	A06 18 mm  ANTR 28x	A04  20x	A17 4x50  8x
C01 DM  12x	C04 MA  12x	R05 CRY  45 cm 2x	A24  2x	A55 AB  856 mm 1x
V10  20x14 8x	V11  5x13 8x	A18 3,5x18  68x	A48  60x	A65  12x
A64  1964 mm 1x				


GESAMTANSICHT

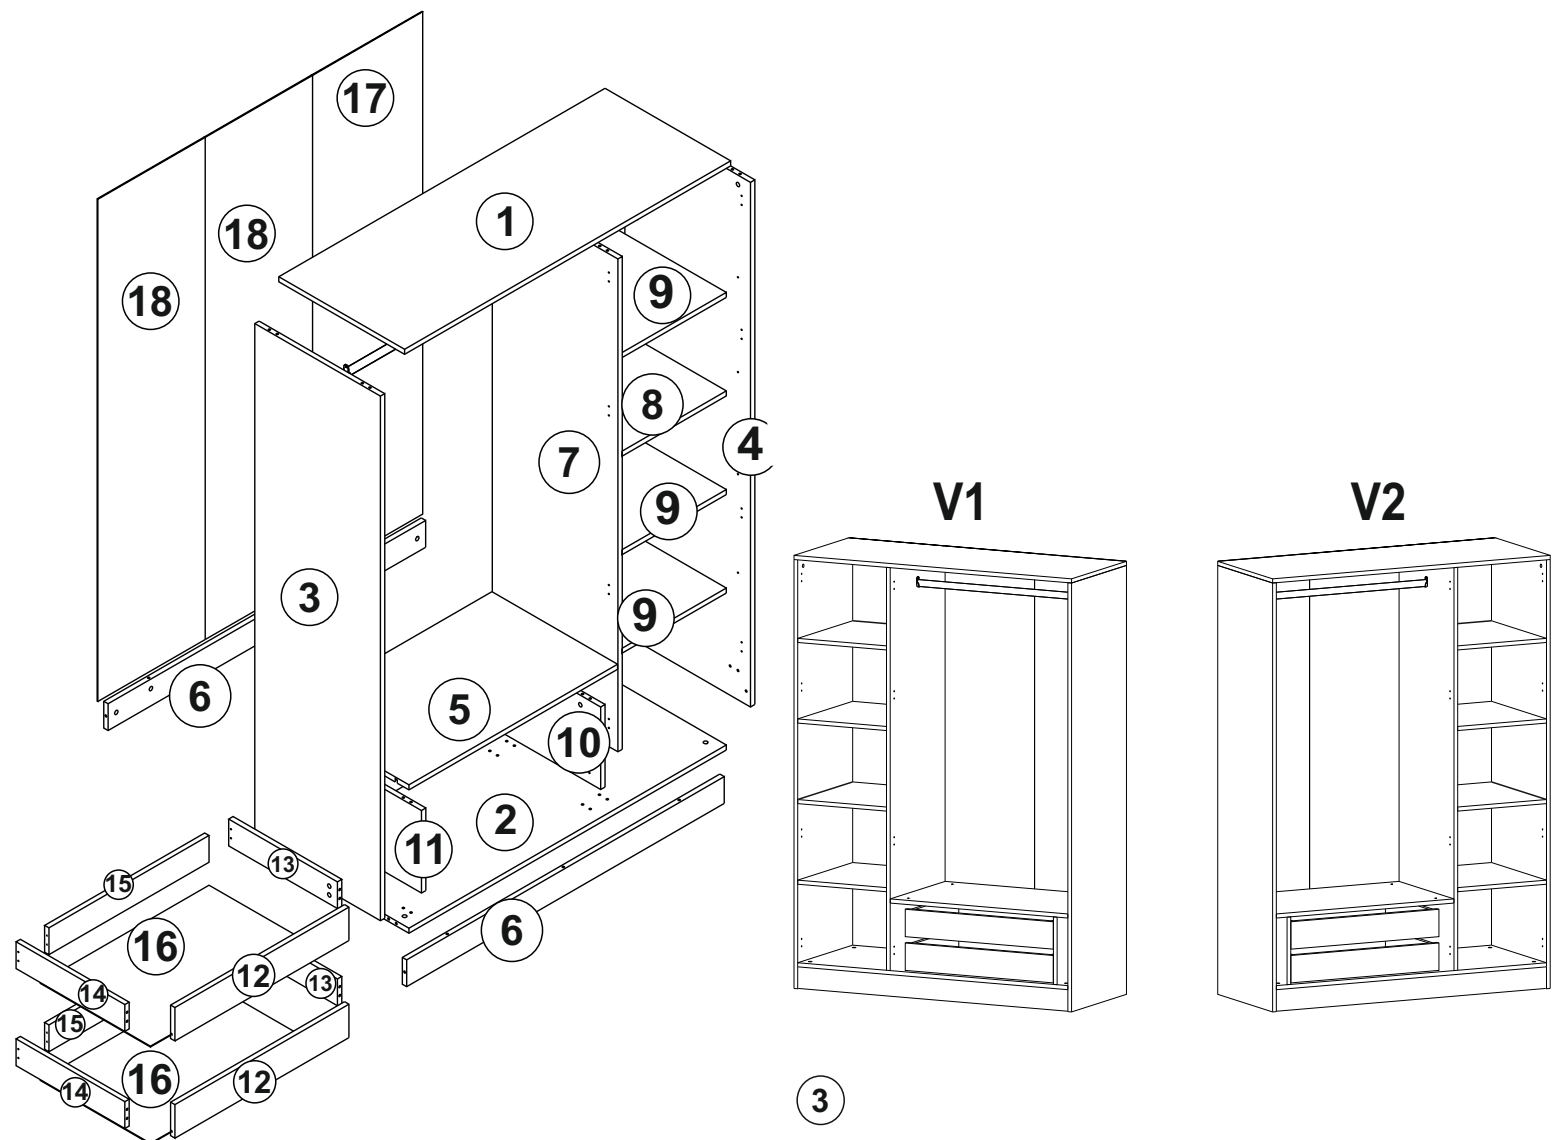


1

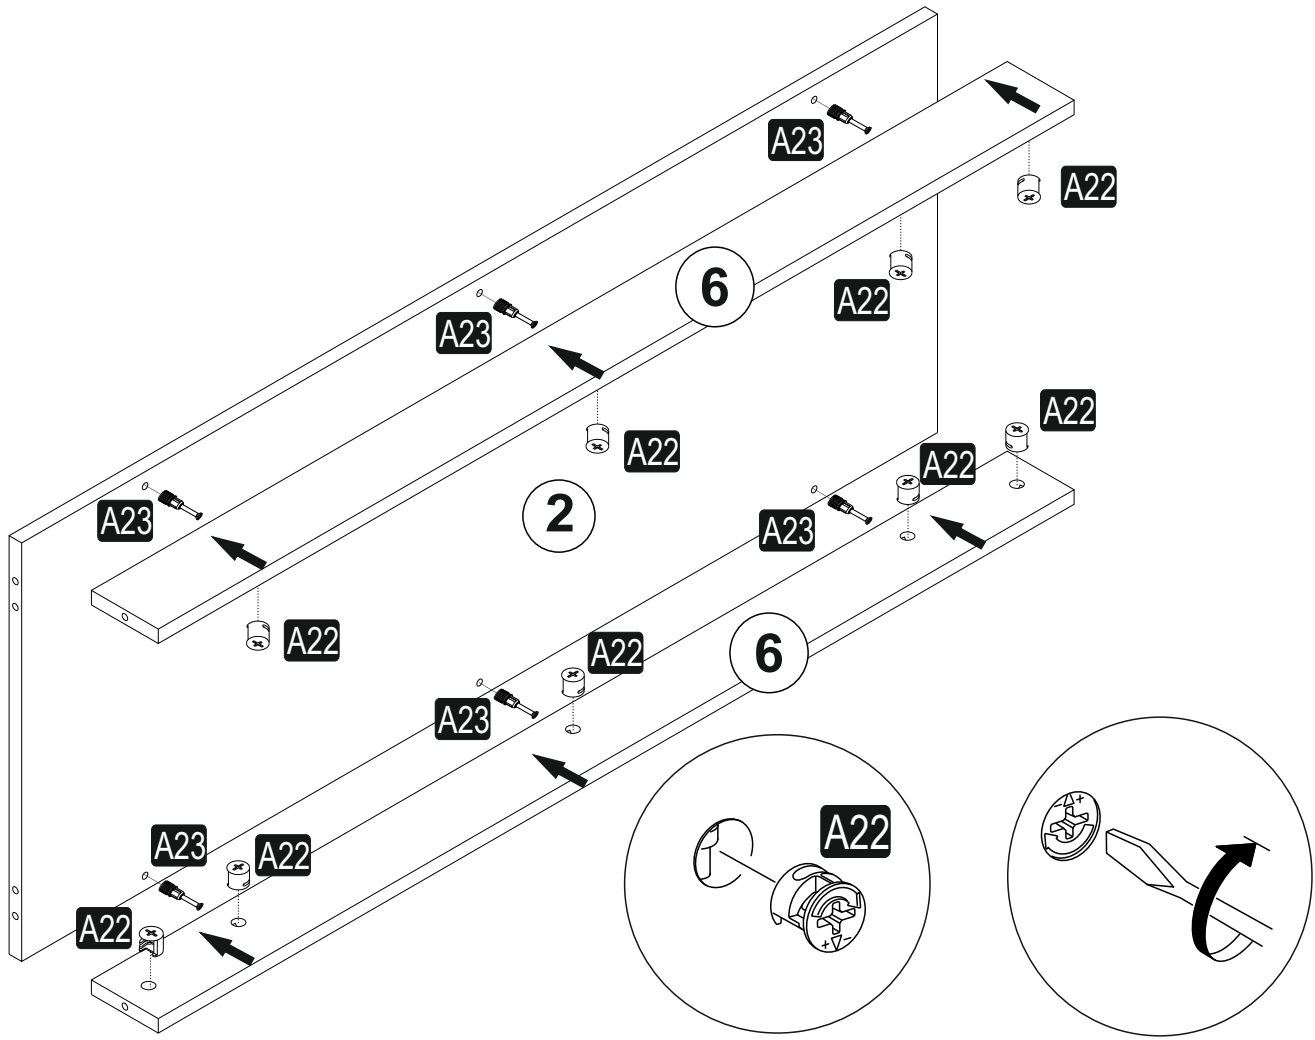


2

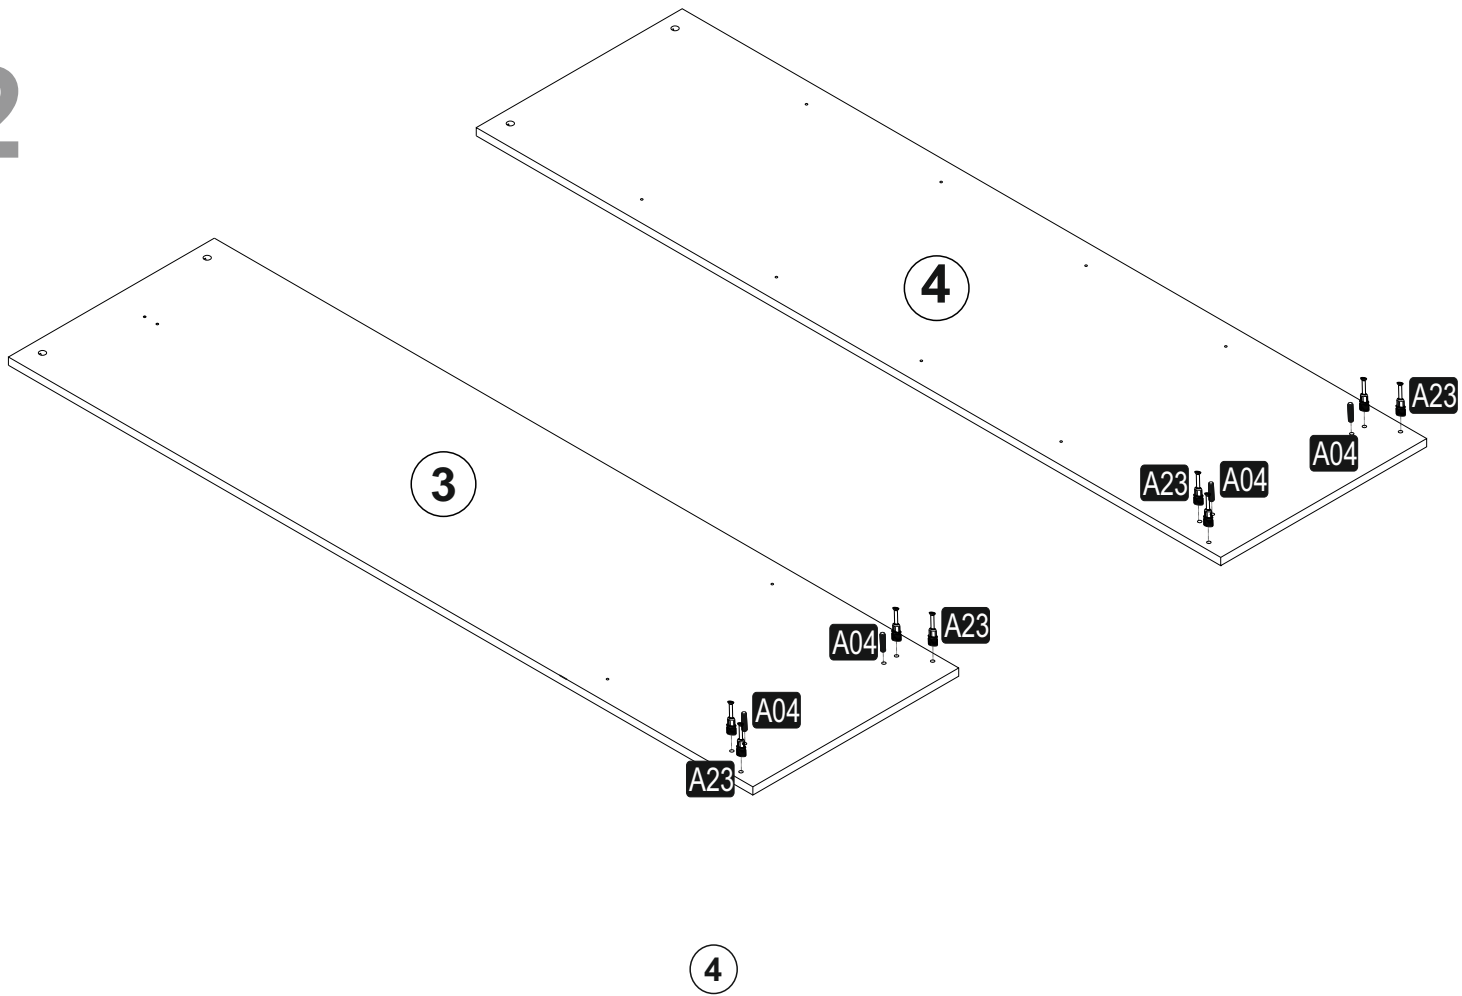



3

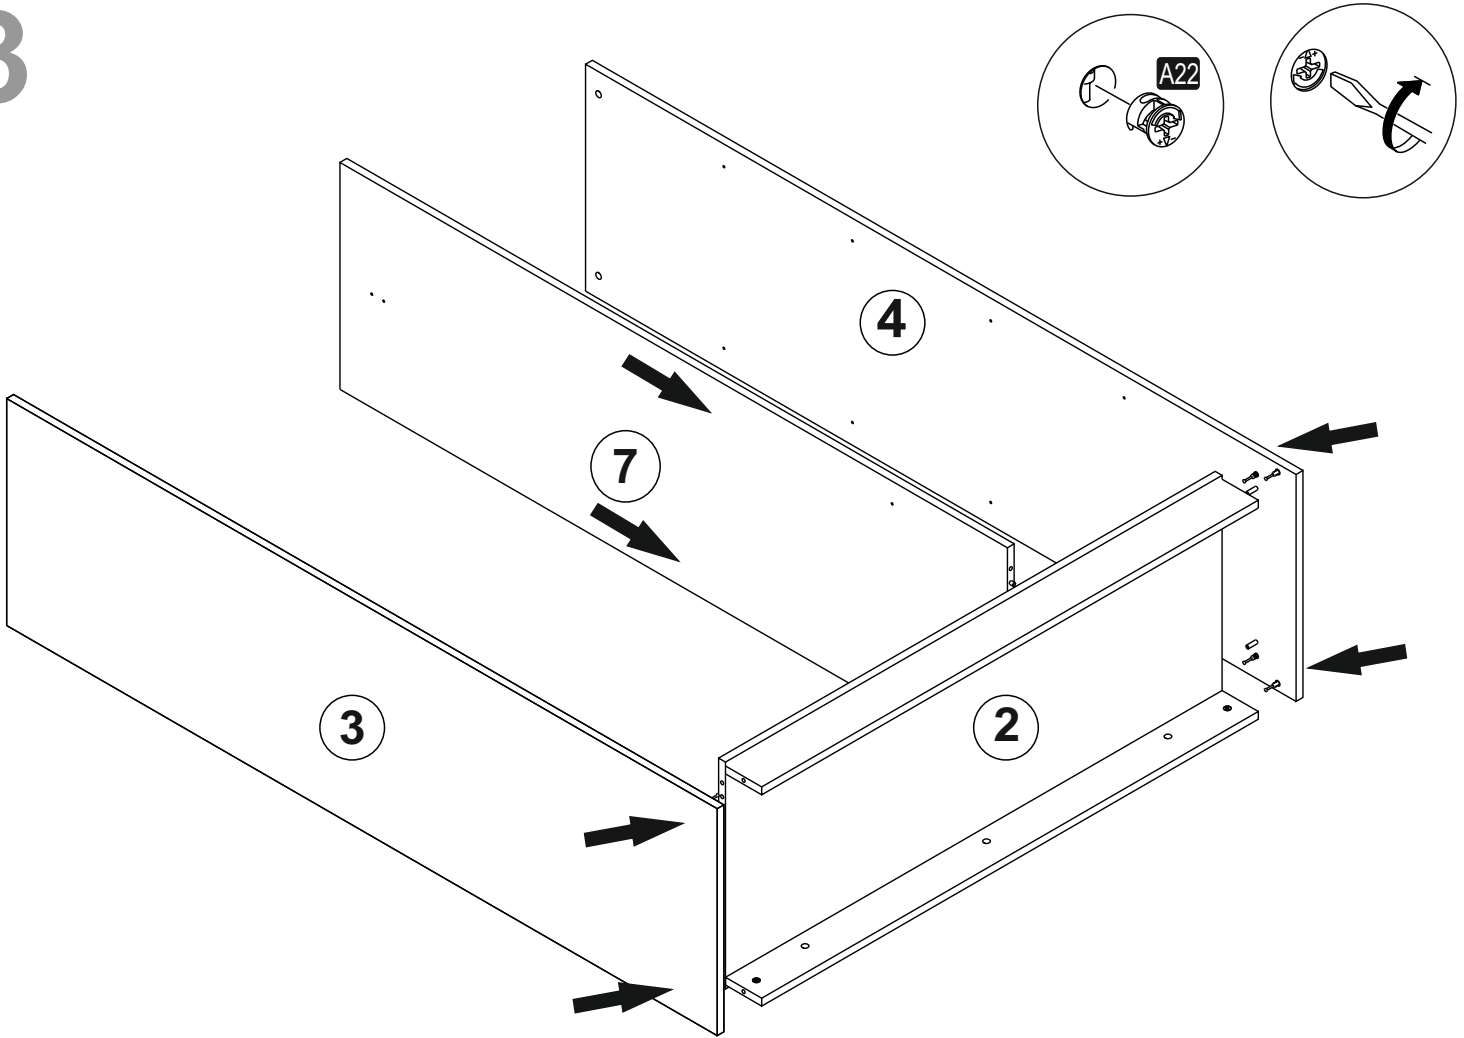

4


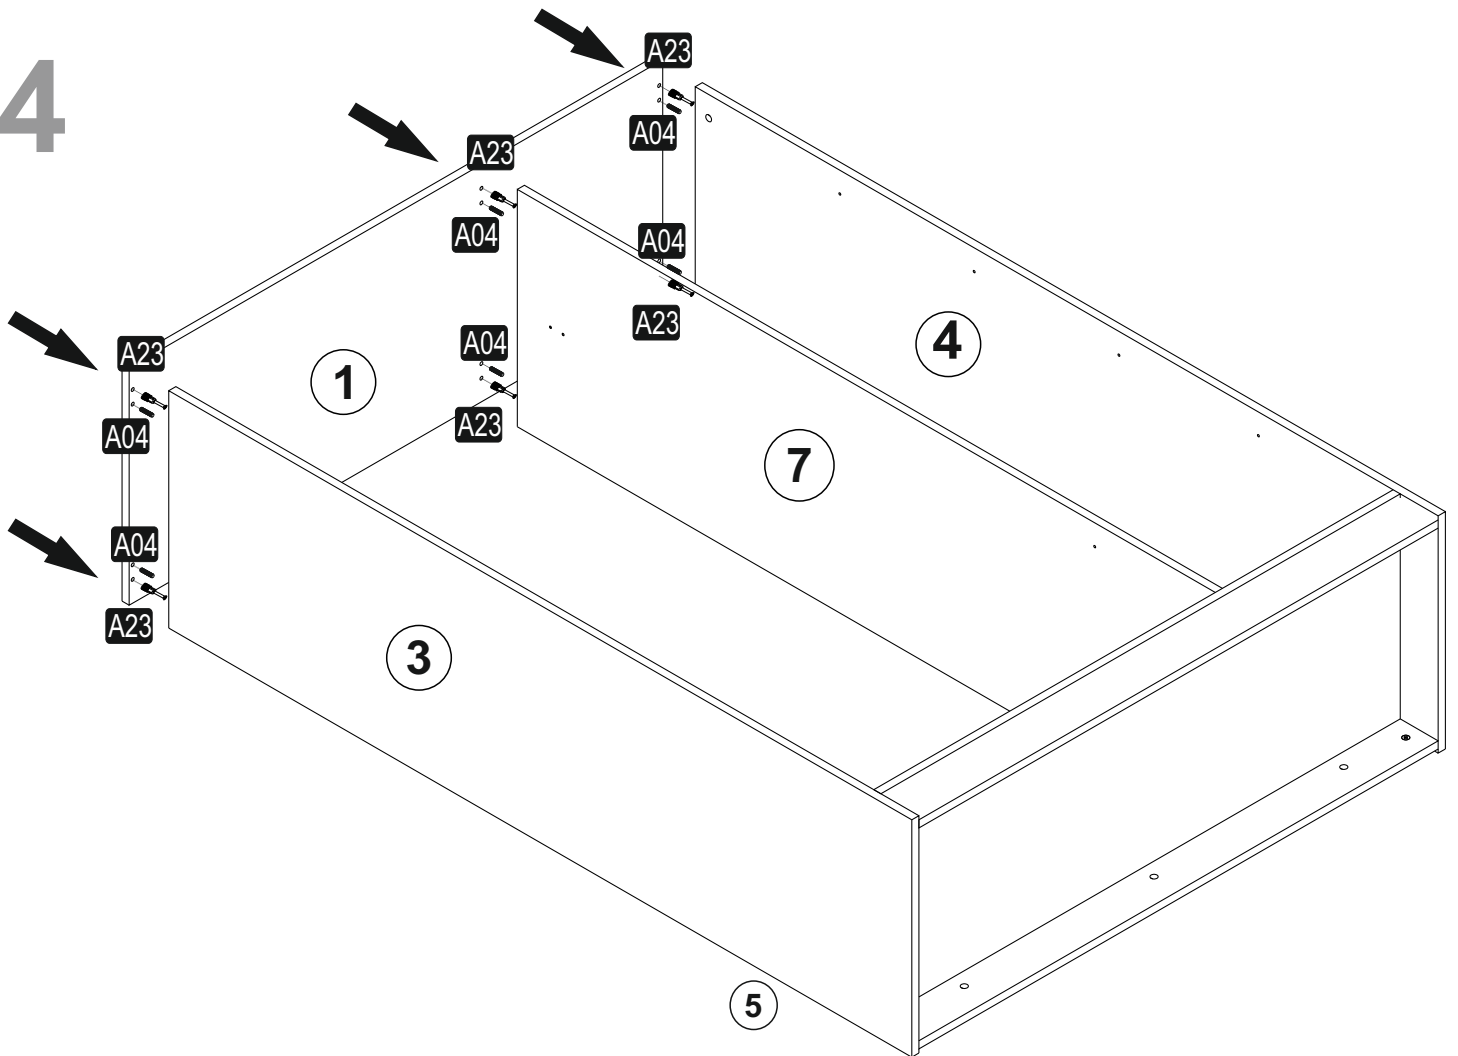


5


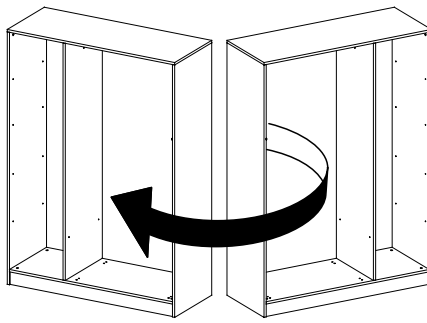
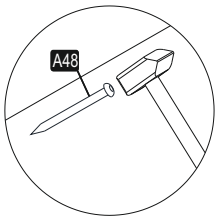


A48

A48

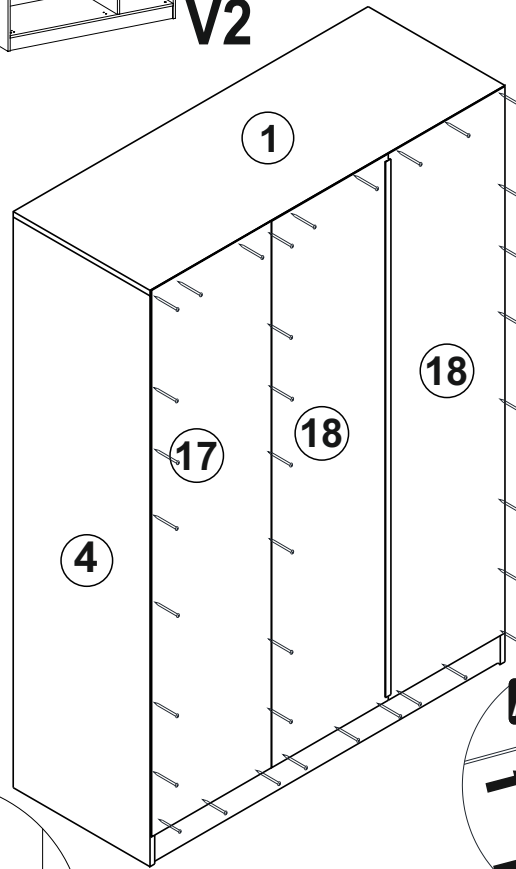
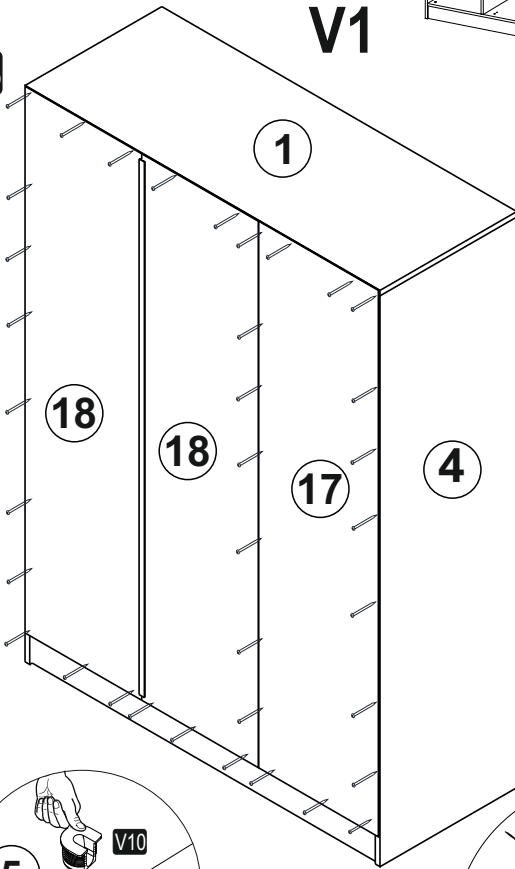


6

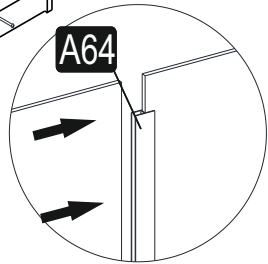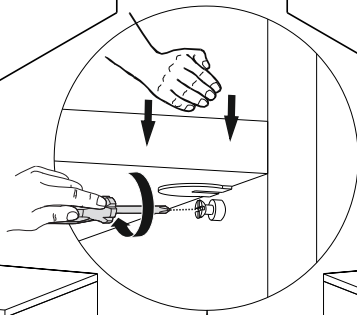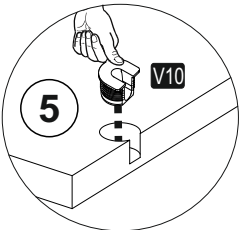


V1

V2

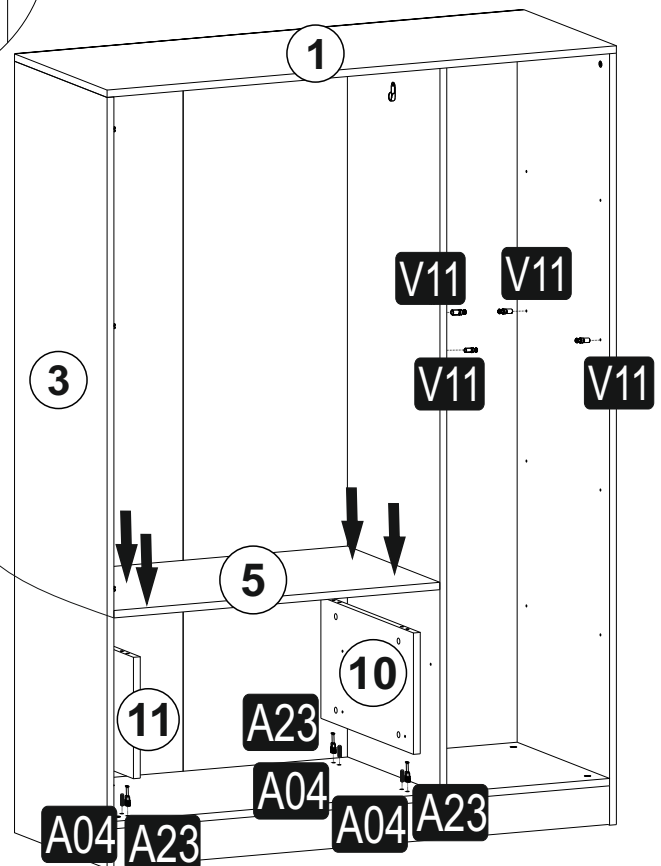
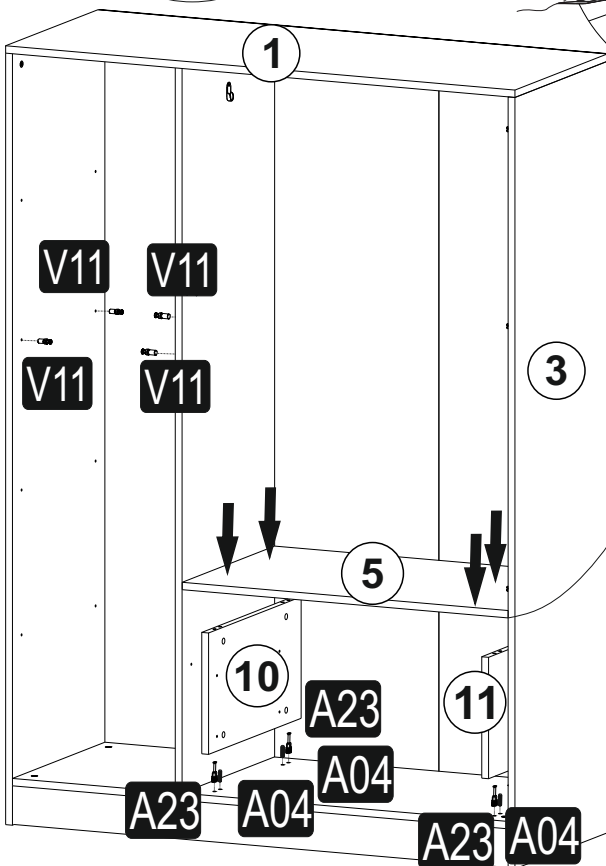


6




7

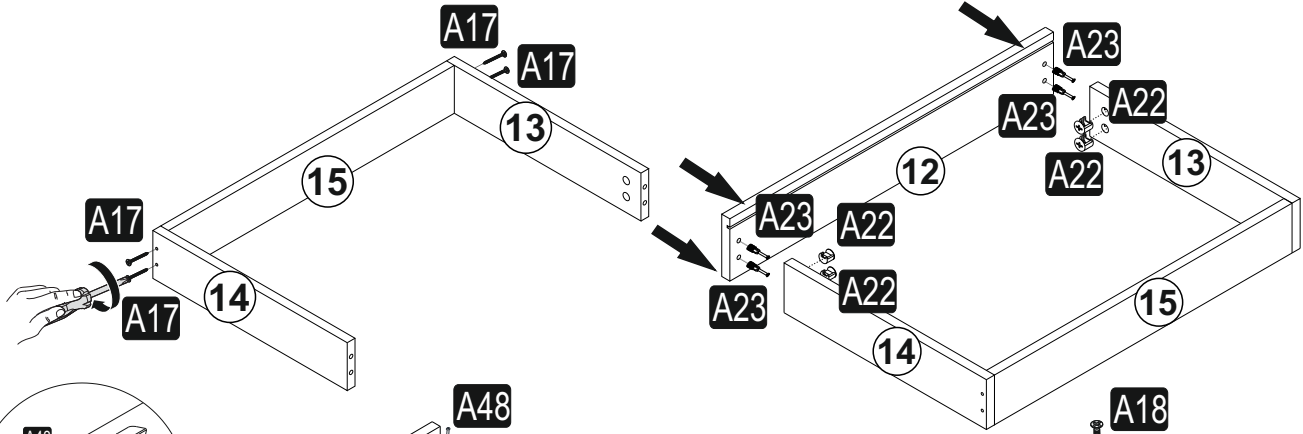

8

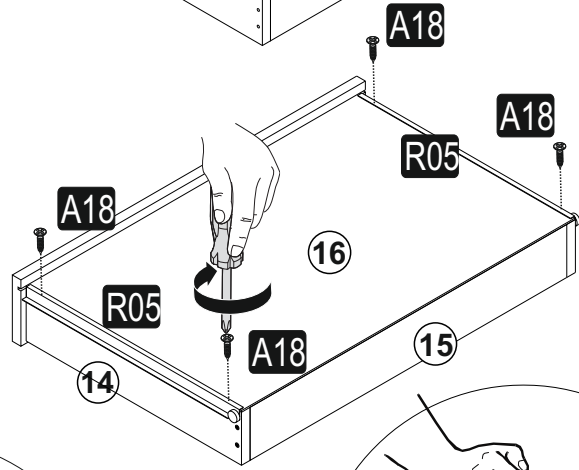
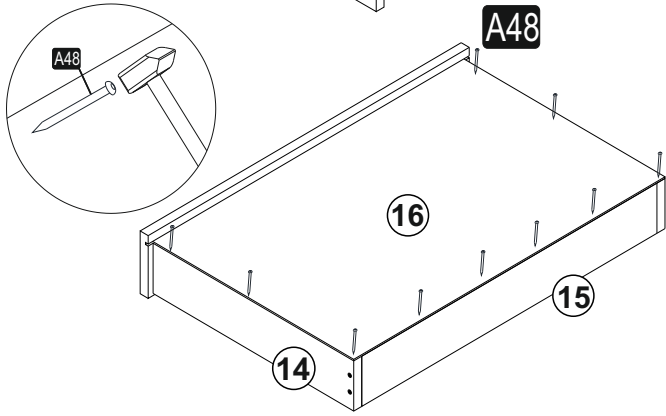


9

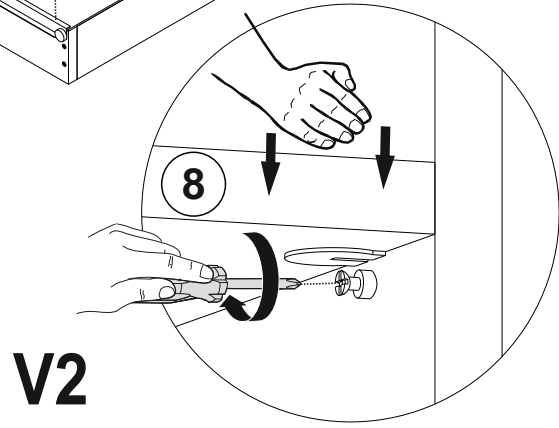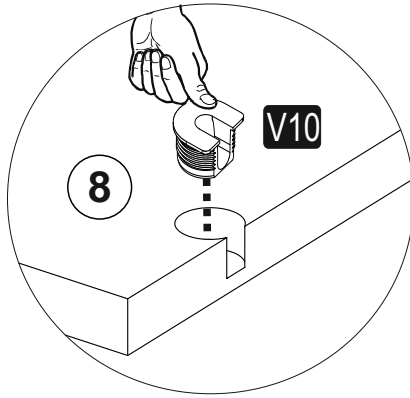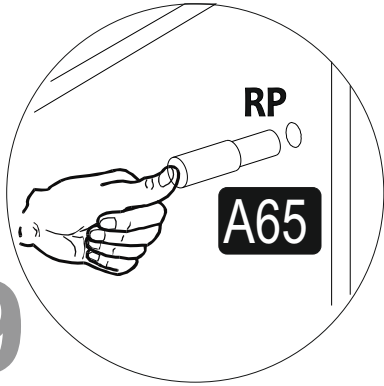


V1

V2

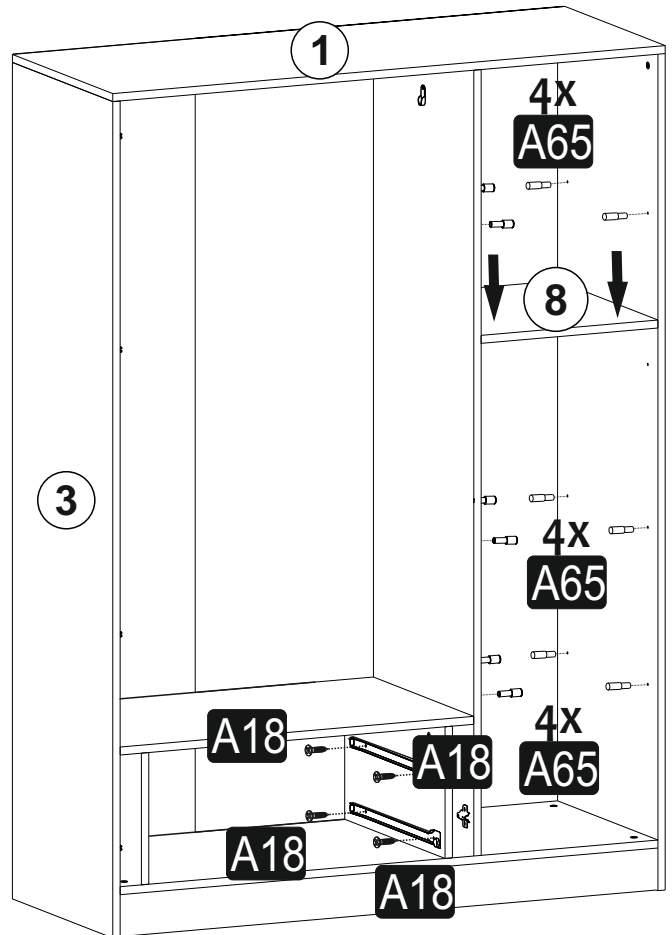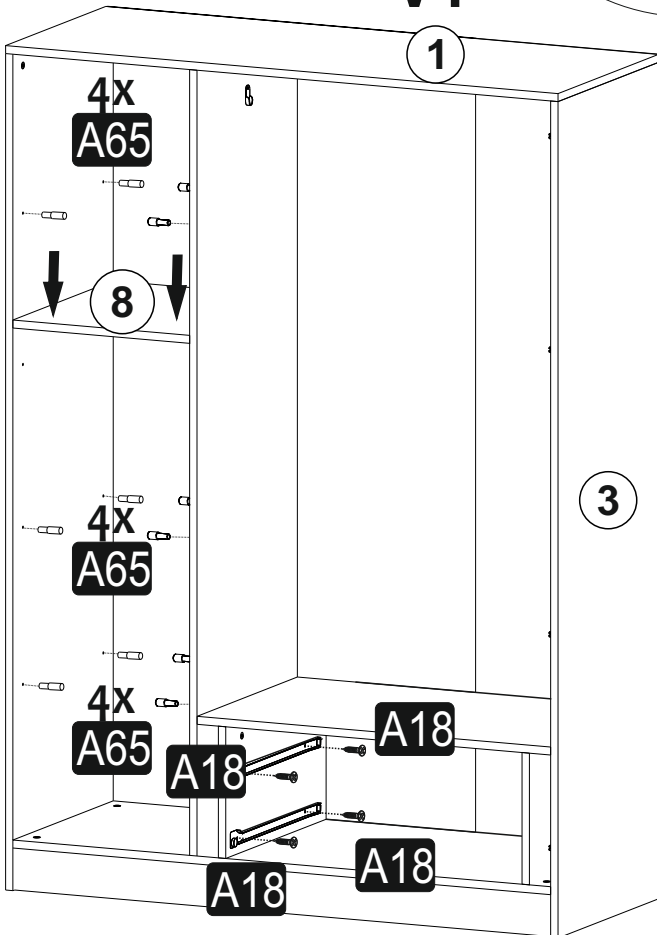


10

V1

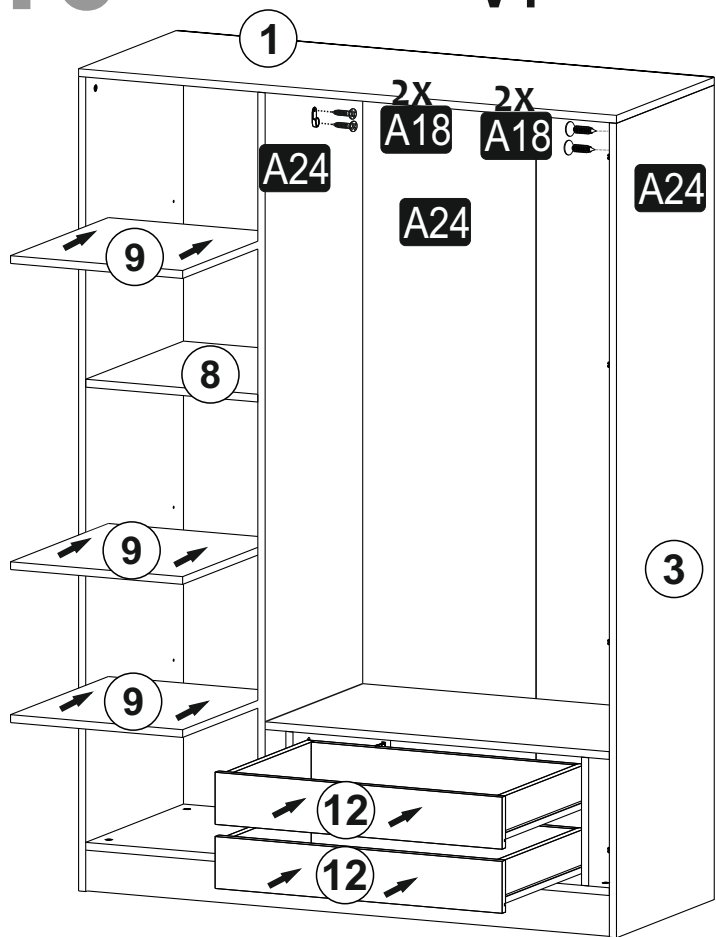

V2

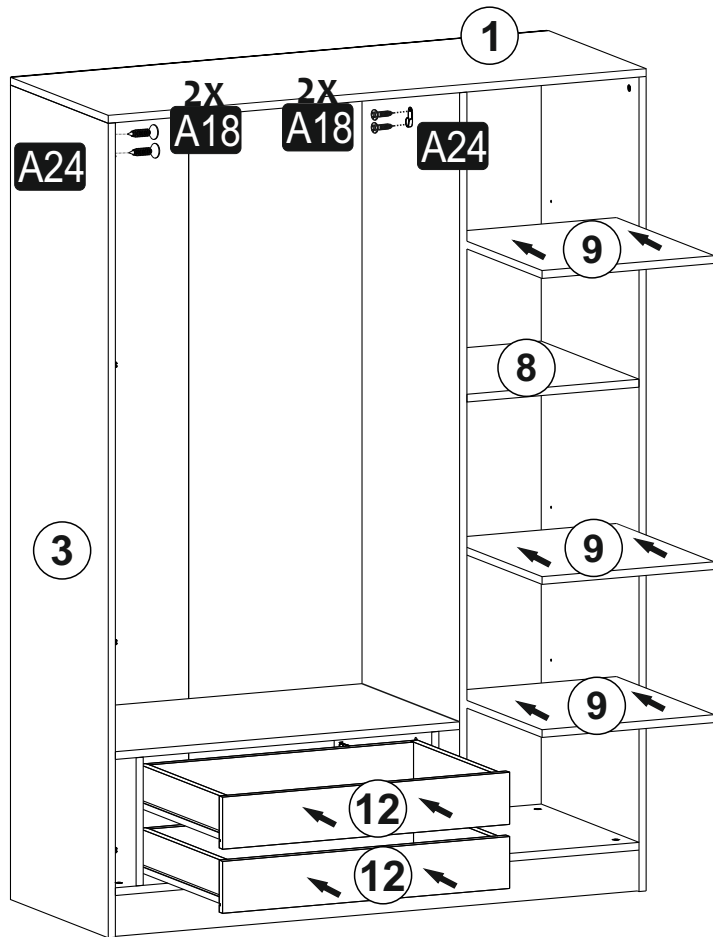

11

