

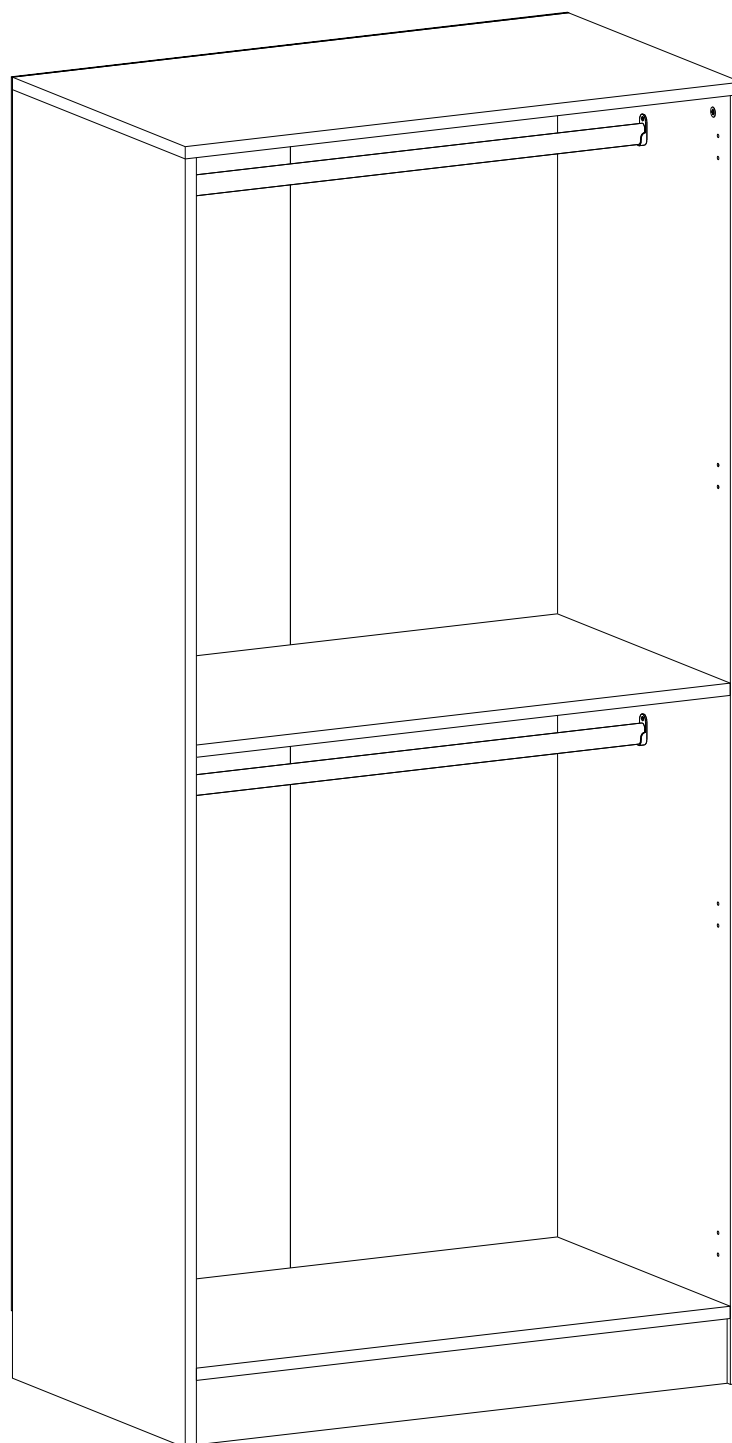
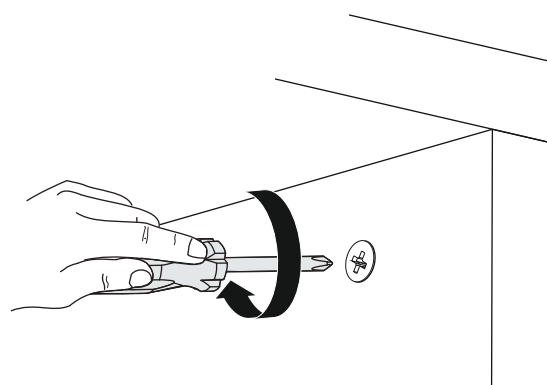
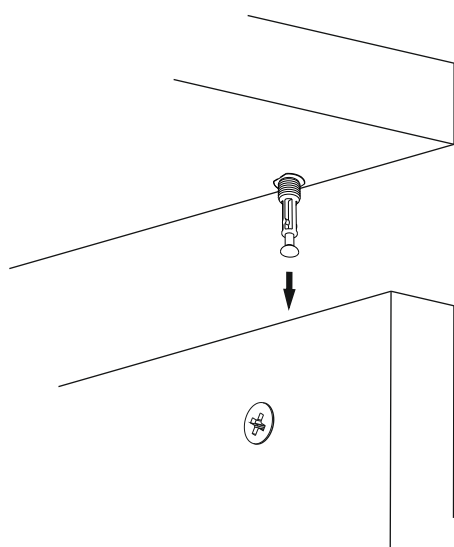
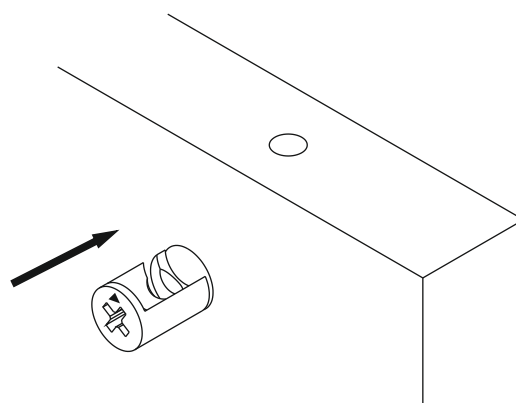
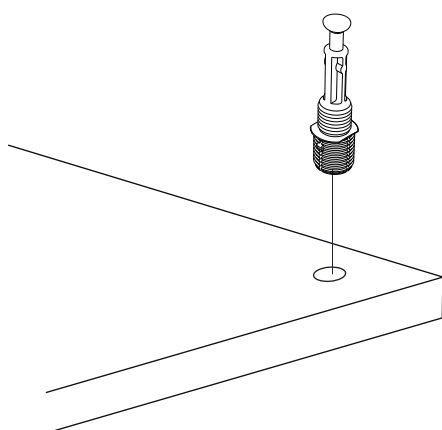
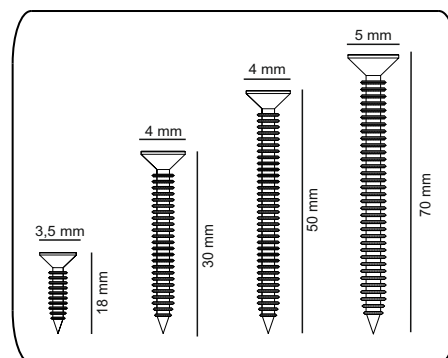
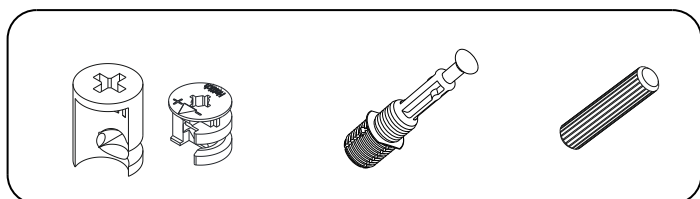
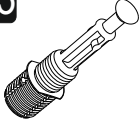





MEDWAY TIDEWAY KLEIDERSCHRANK MIT 2 TÜREN




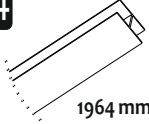

MONTAGE ZUBEHÖRTEILE

A23  22x	A22  22x	A06 18 mm  12x	A04 KVLV  12x	C01 DM  8x
C04  8x	A18 3,5x18  40x	A24  4x	A55 AB 854 mm  2x	A48 AC  40x
A64  1964 mm 1x				

GESAMTANSICHT

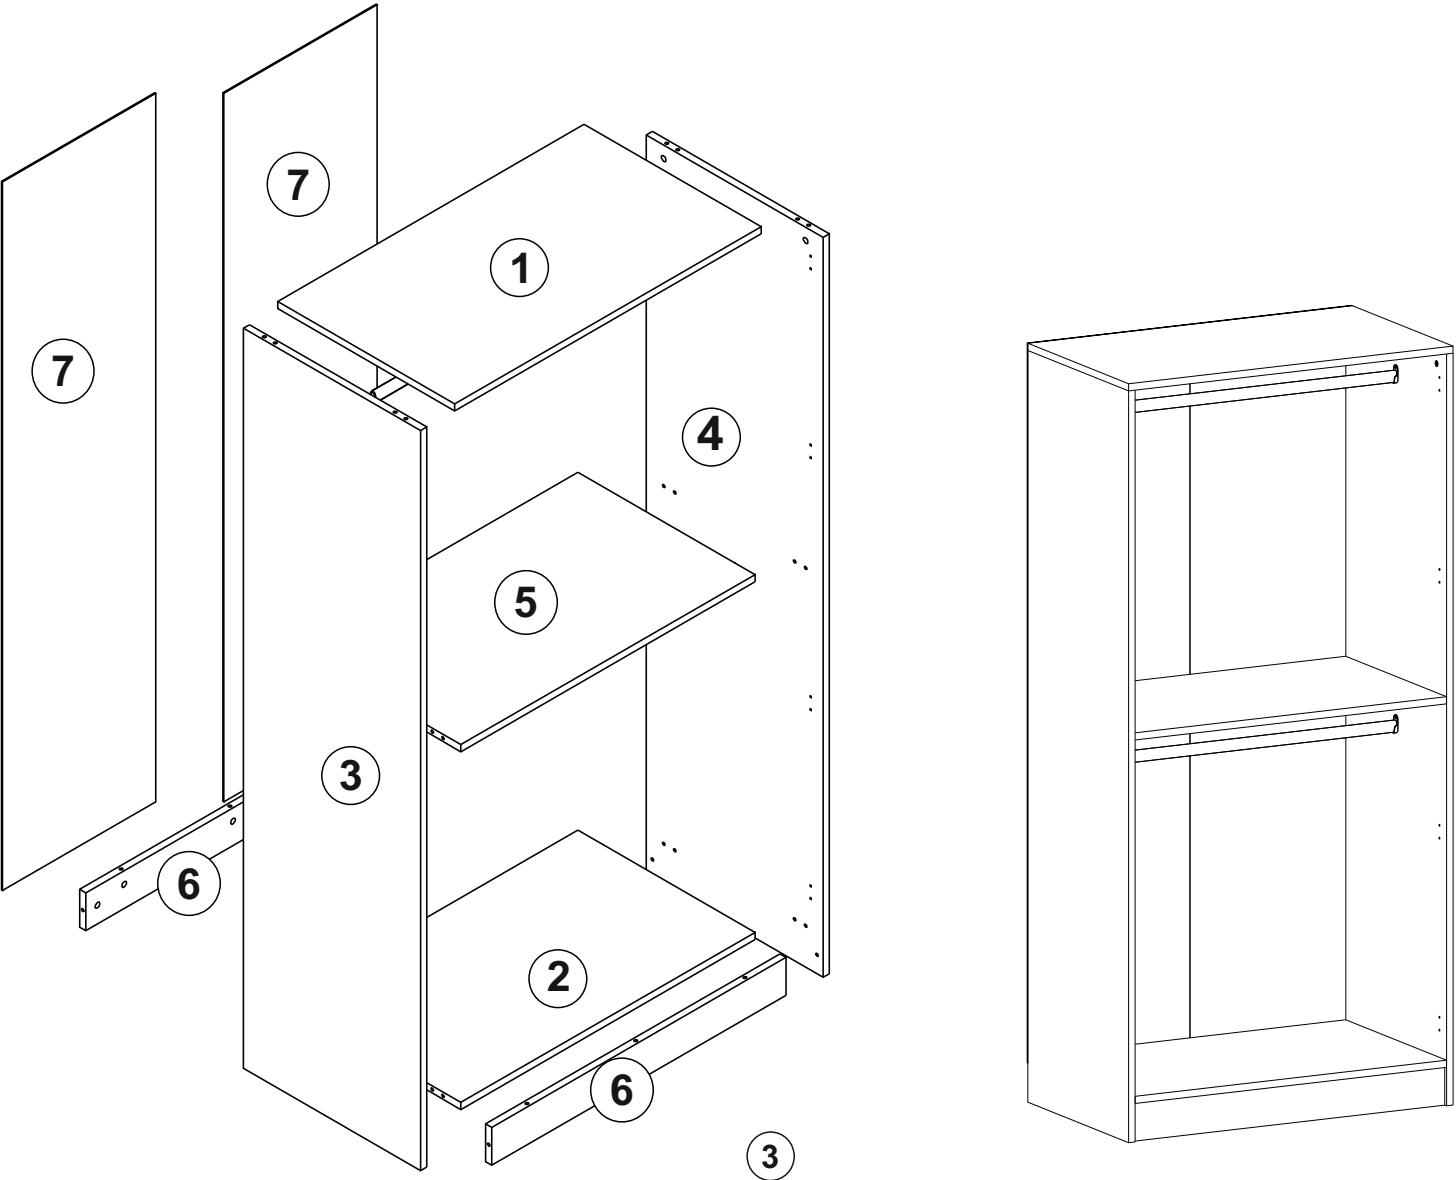



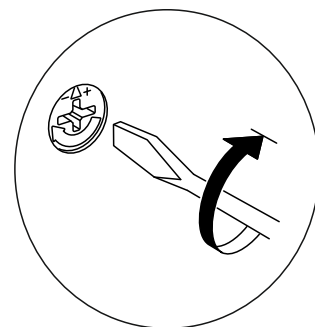



Diagram 1 illustrates the assembly of the side panel (5) to the main frame (2). The side panel is attached to the main frame using screws A23 and A04. A circular inset shows the connection of the side panel to the main frame using a bracket A24 and screws A18.

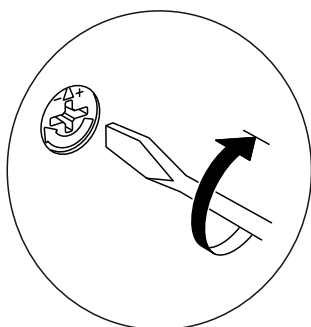


3

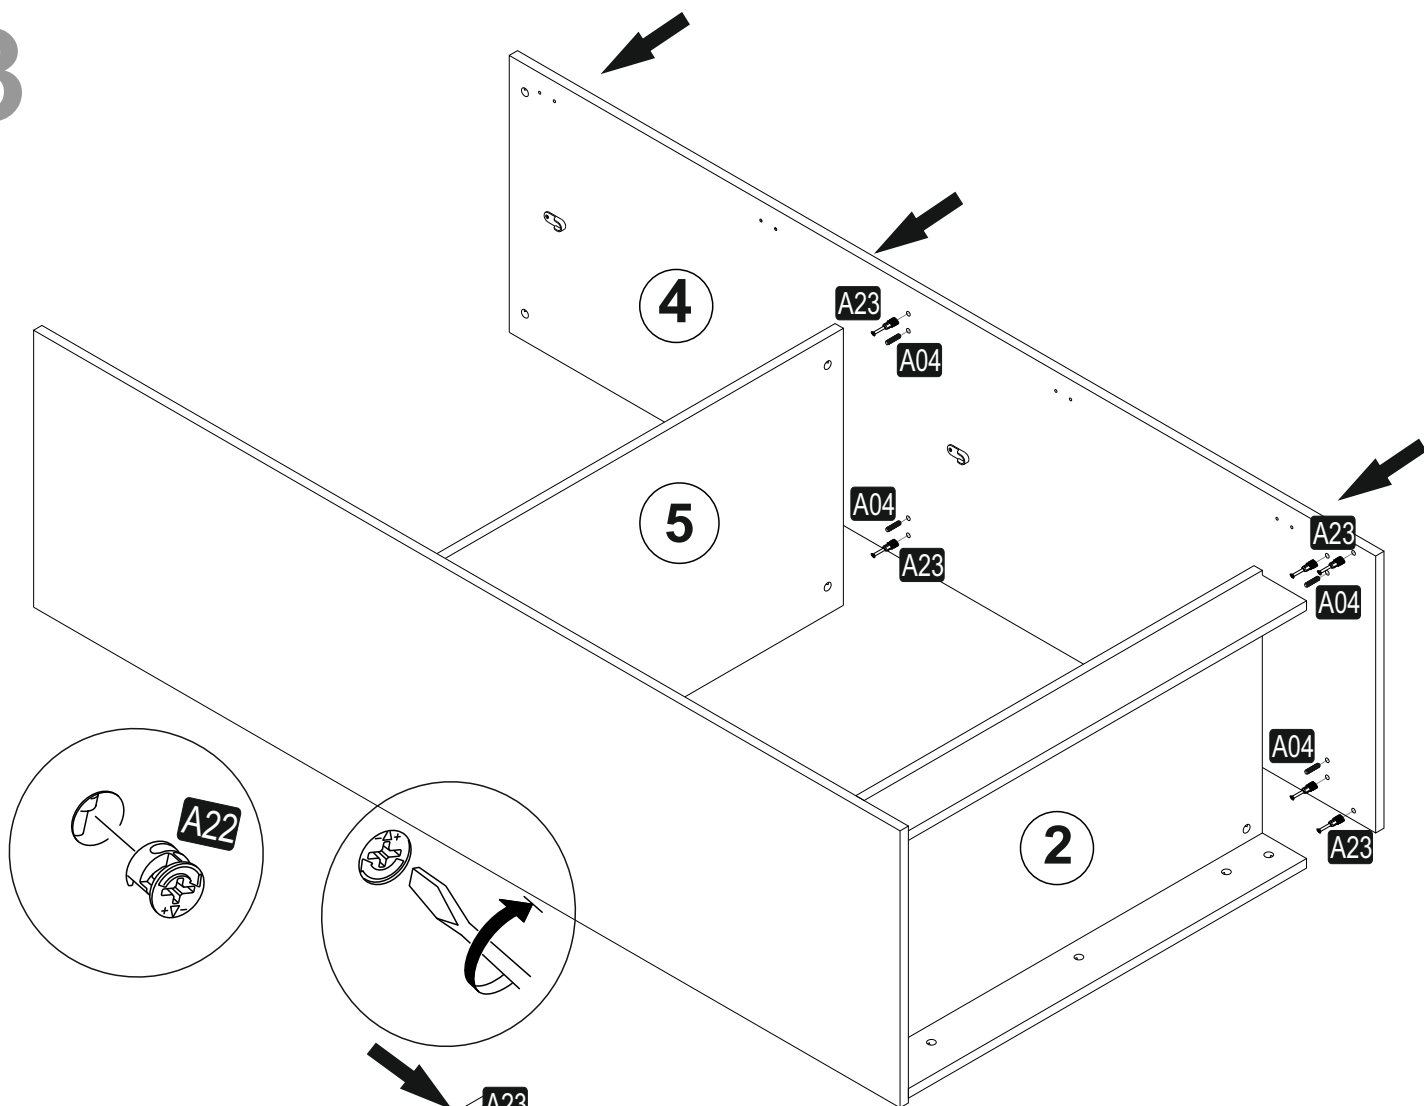


4

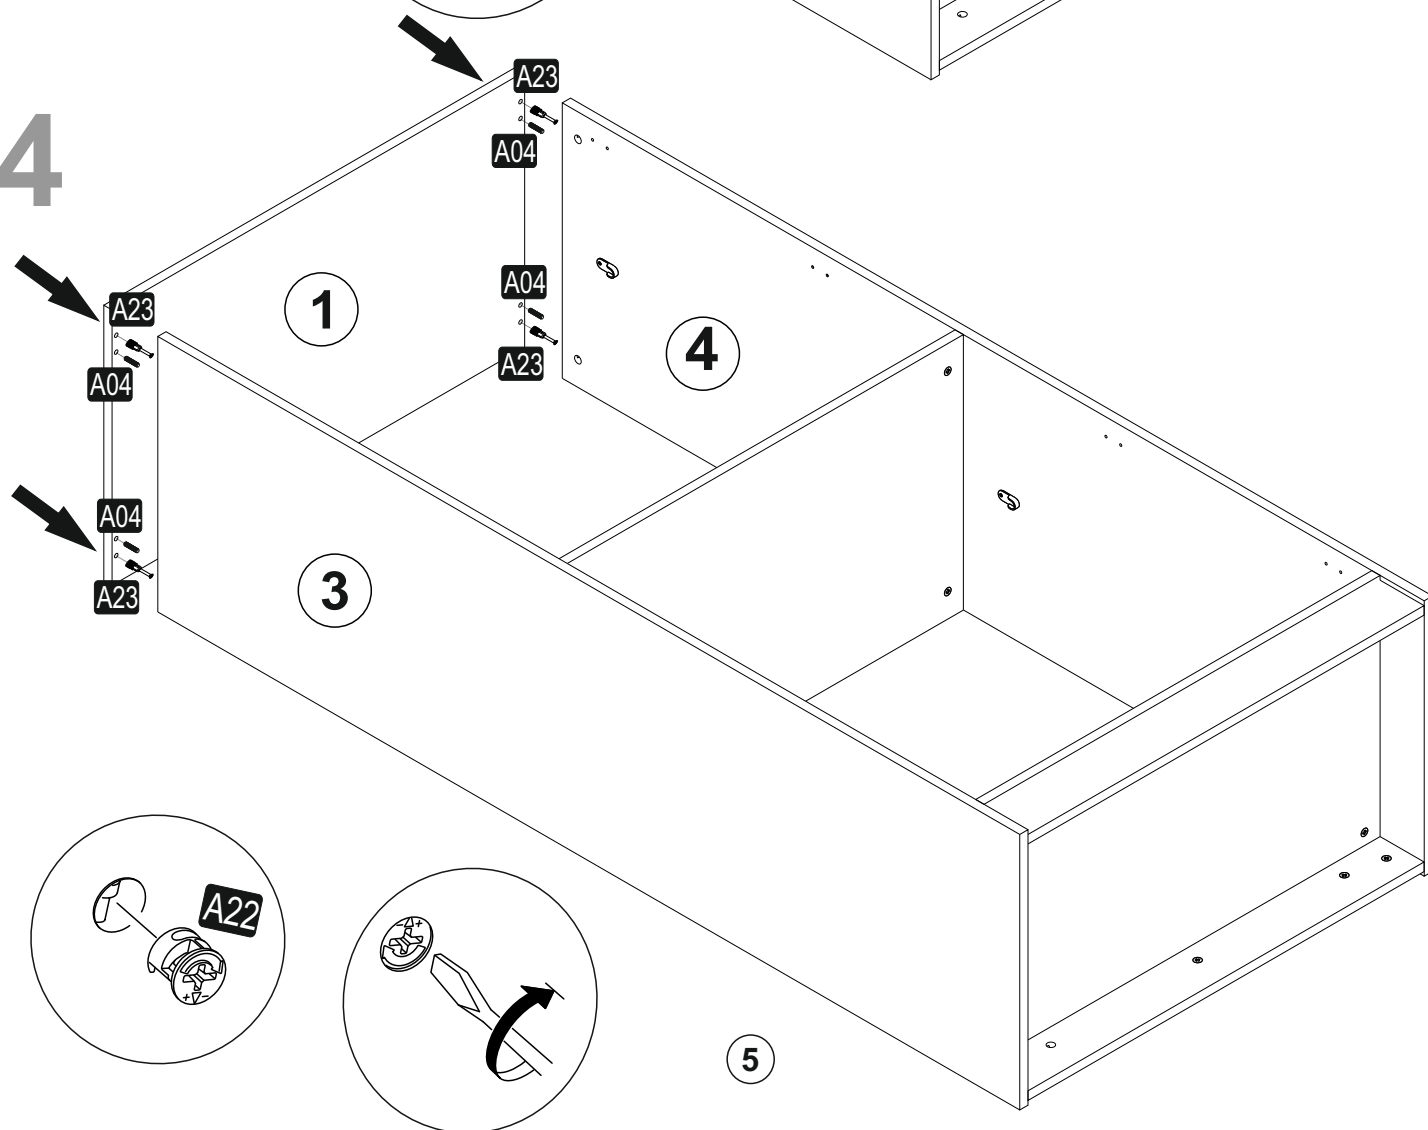


5

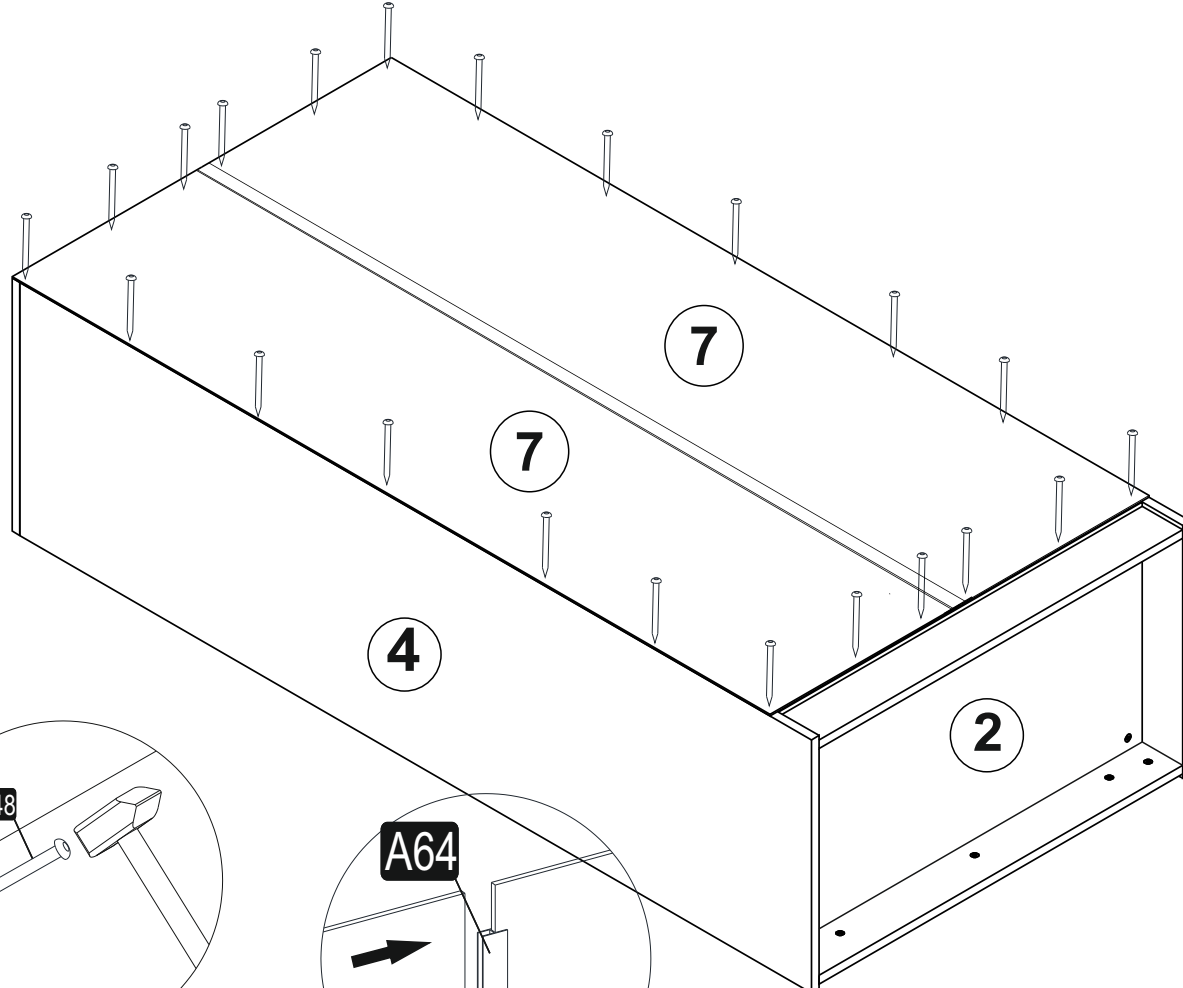


6

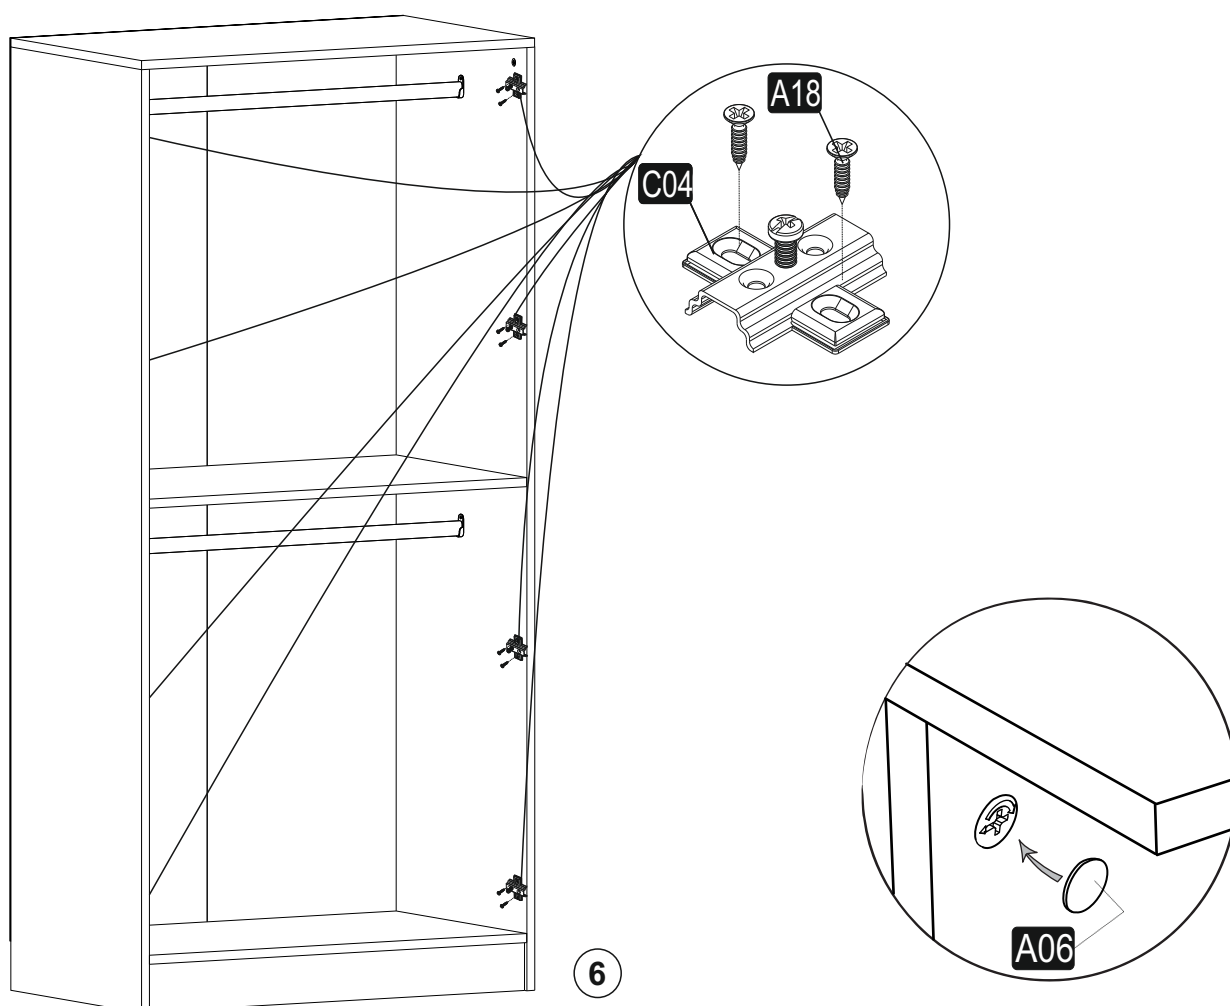

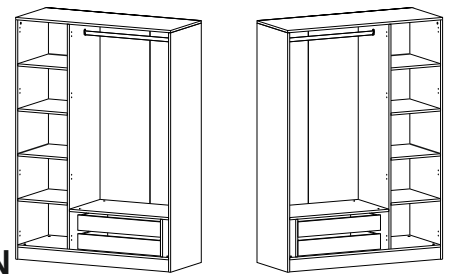


MEDWAY TIDEWAY KLEIDERSCHRANK MIT 3 TÜREN










V1

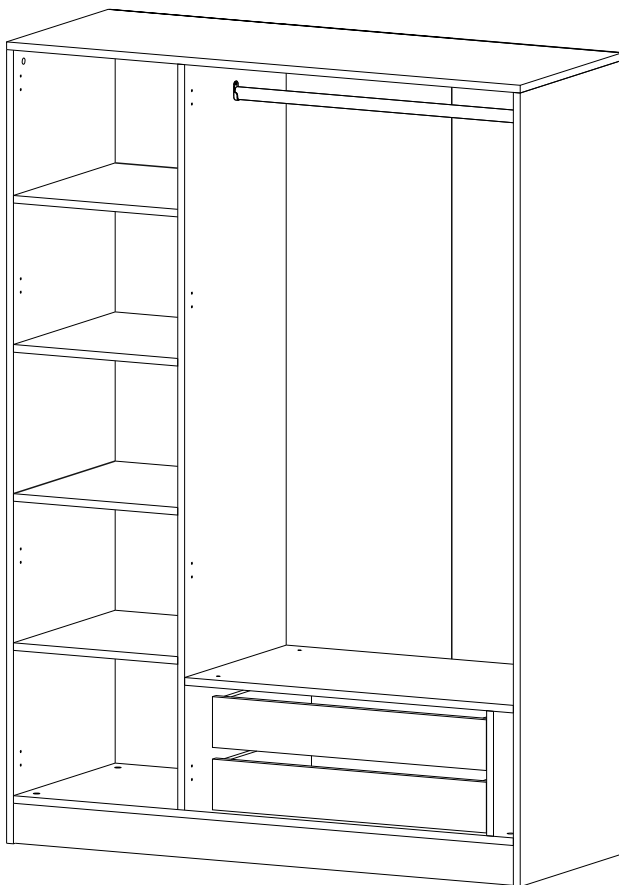


V2

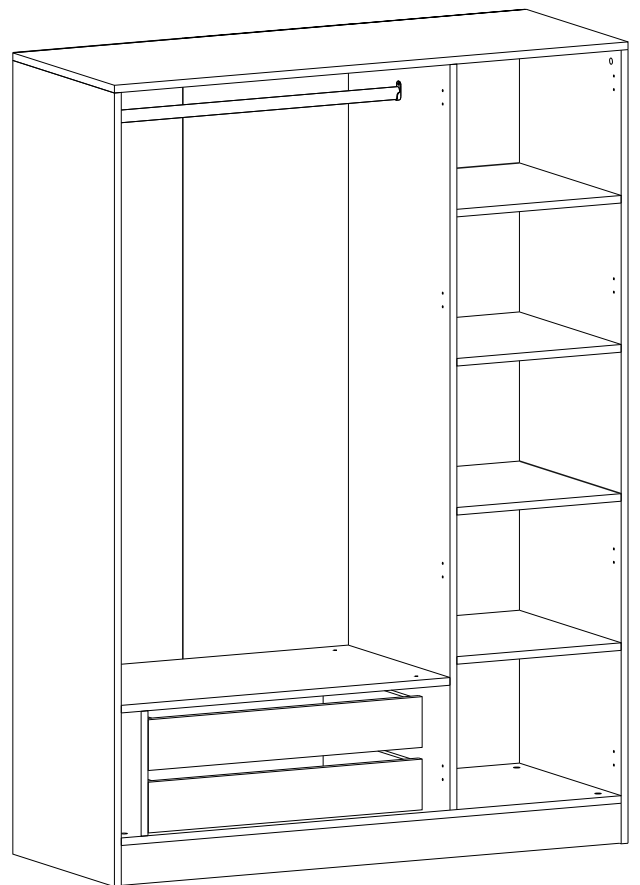


MONTAGE ZUBEHÖRTEILE

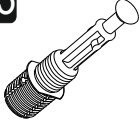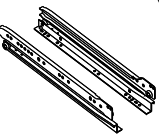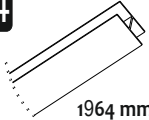A23  38x	A22  38x	A06 18 mm  ANTR 28x	A04  20x	A17 4x50  8x
C01 DM  12x	C04 MA  12x	R05 CRY 45 cm  2x	A24  2x	A55 AB 856 mm  1x
V10 20x14  8x	V11 5x13  8x	A18 3,5x18  68x	A48  60x	A65  12x
A64  1964 mm 1x				


GESAMTANSICHT

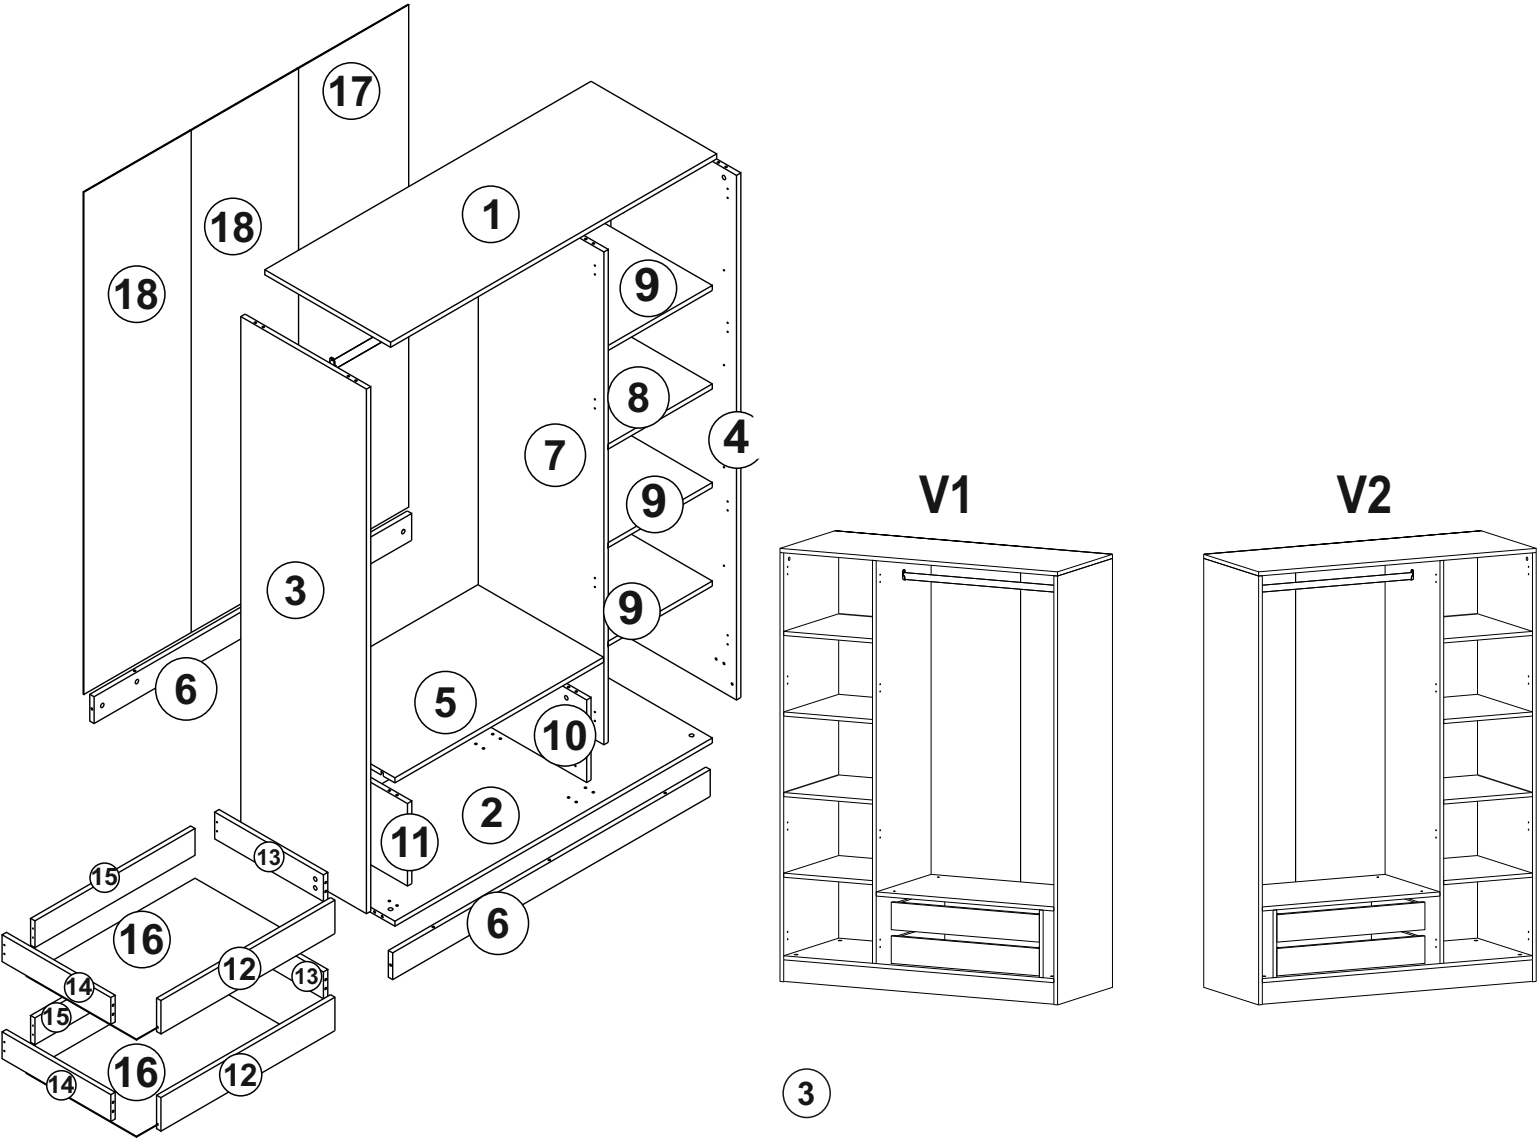


1

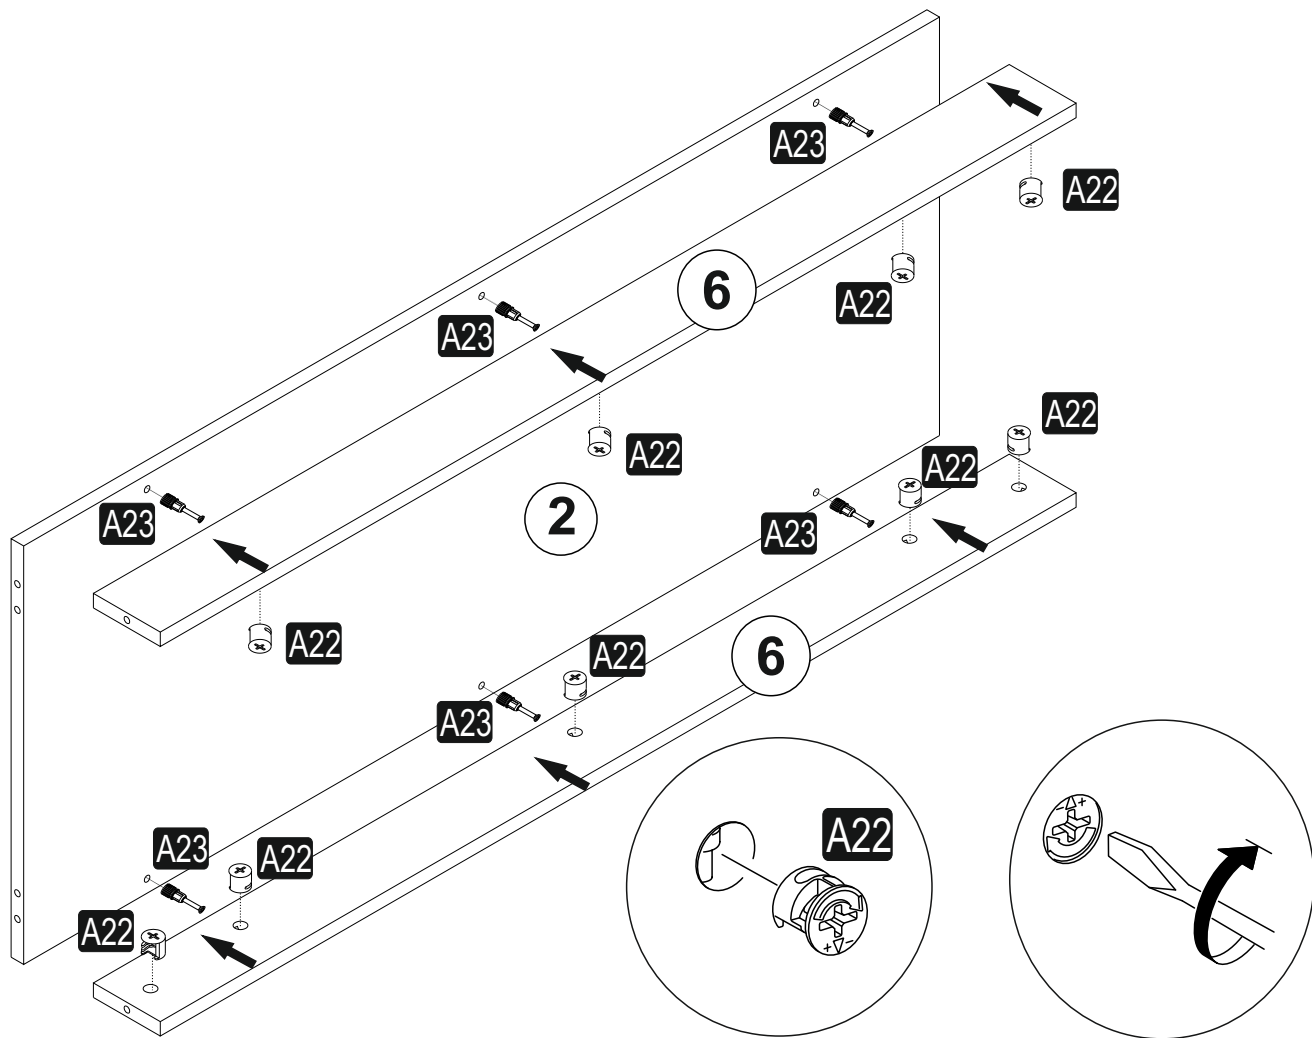


2

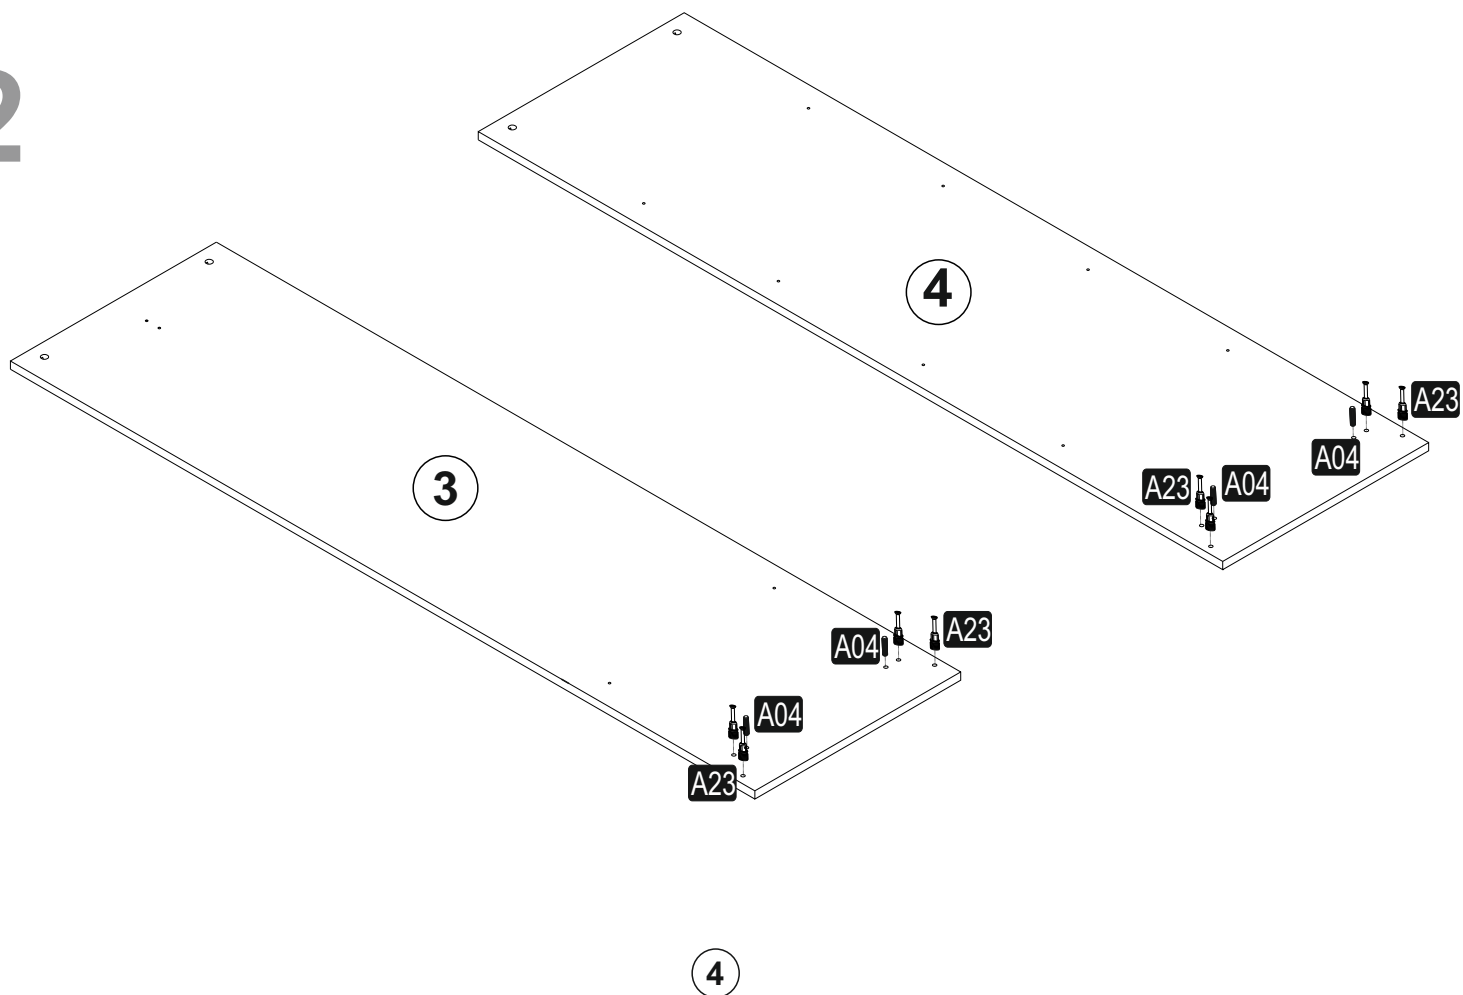



3

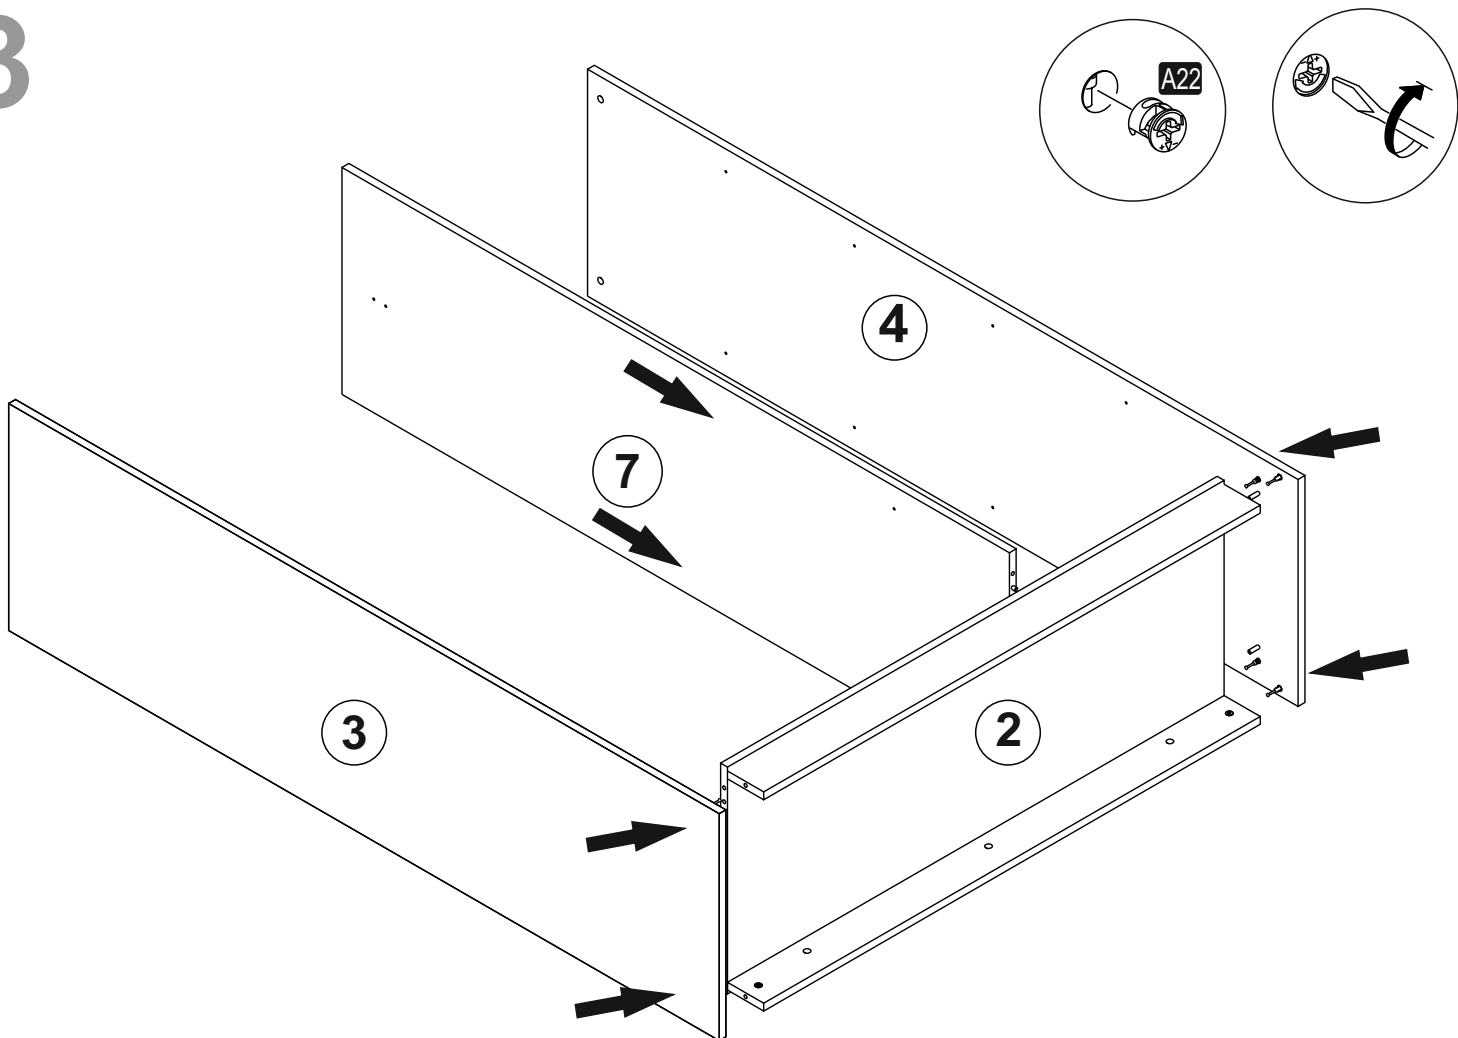

4

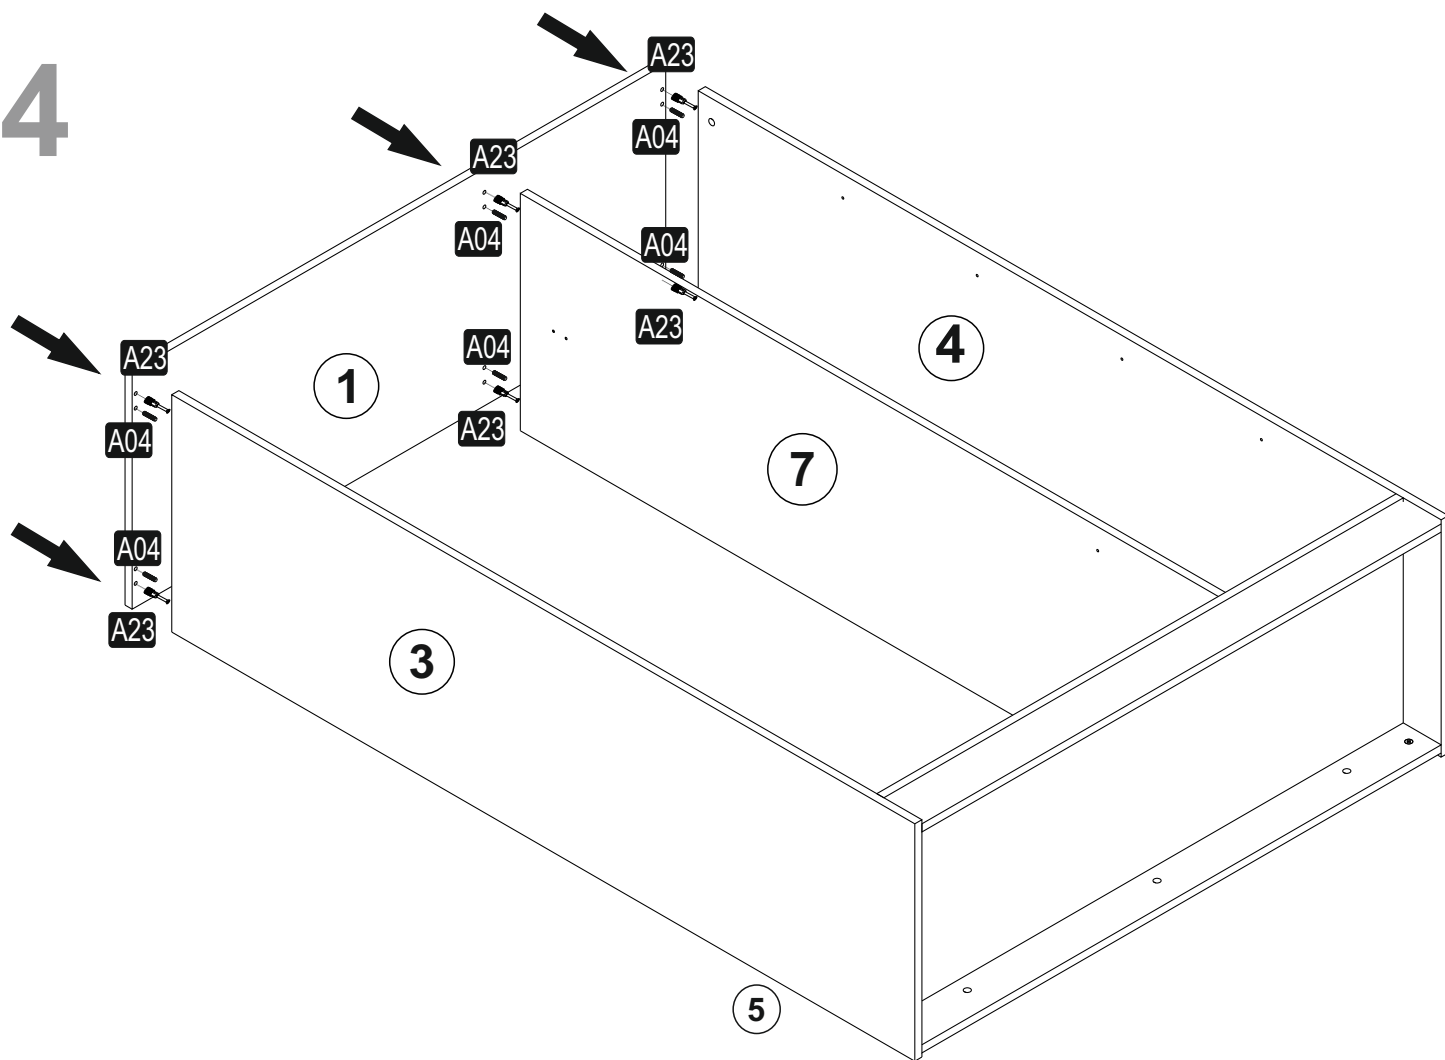

5

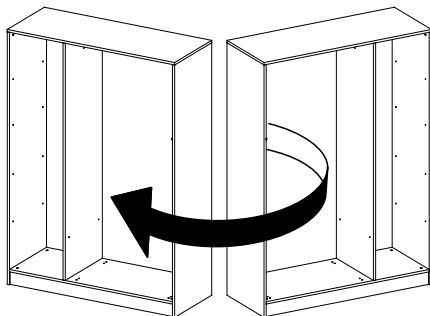
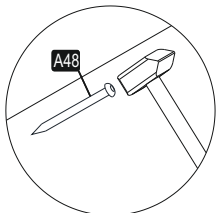


V1


V2

A48


A48

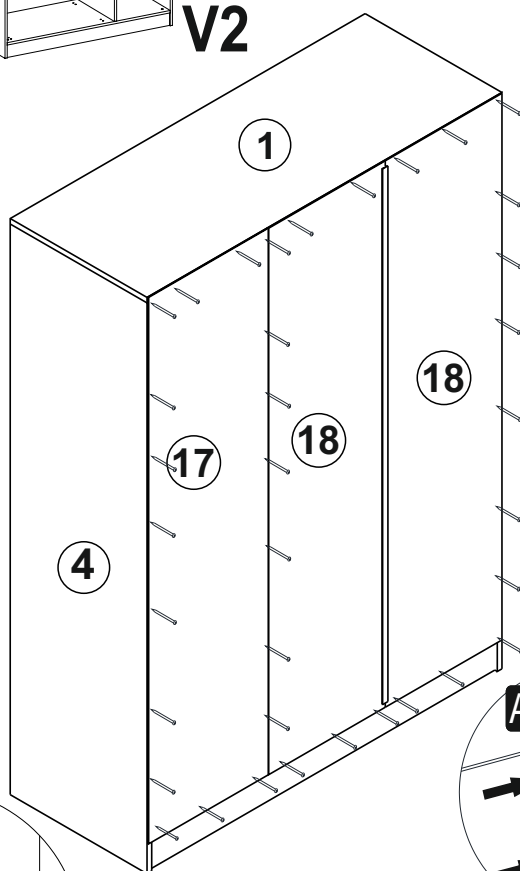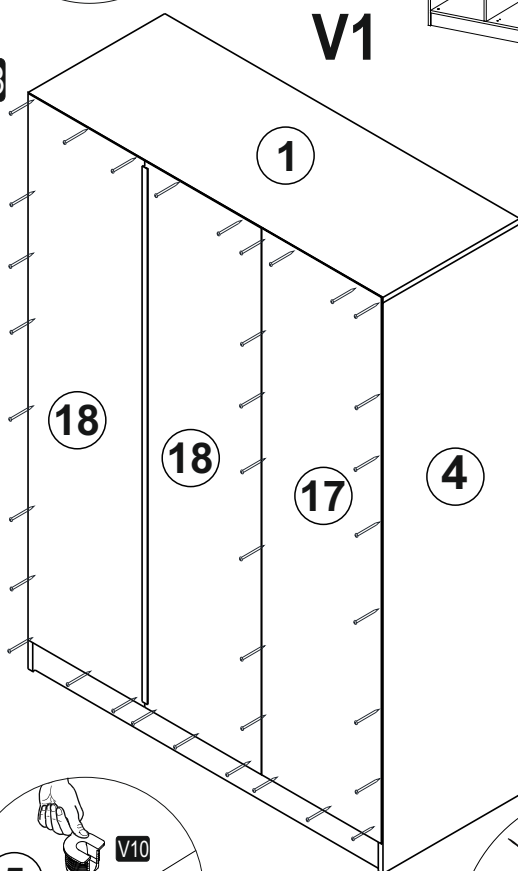




6

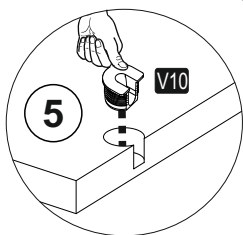

V1

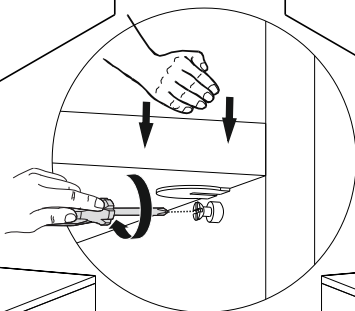


V2

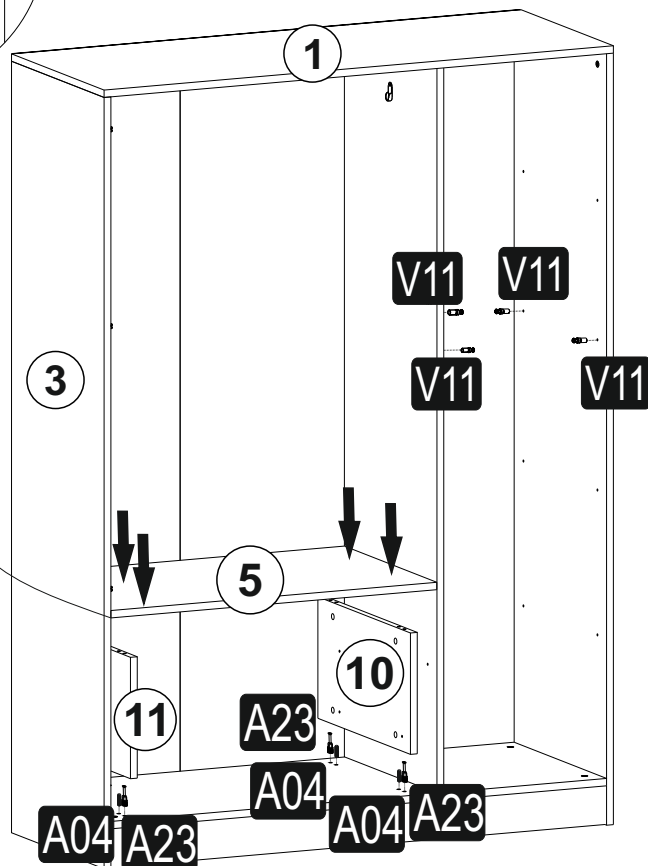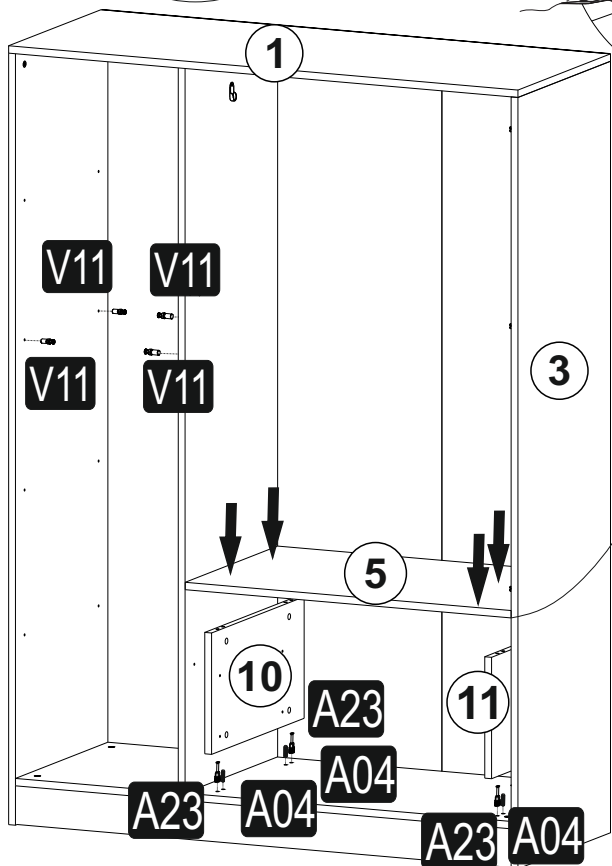
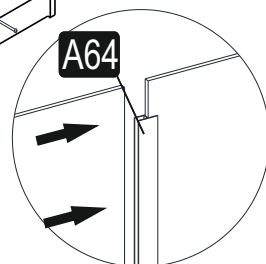


6




7

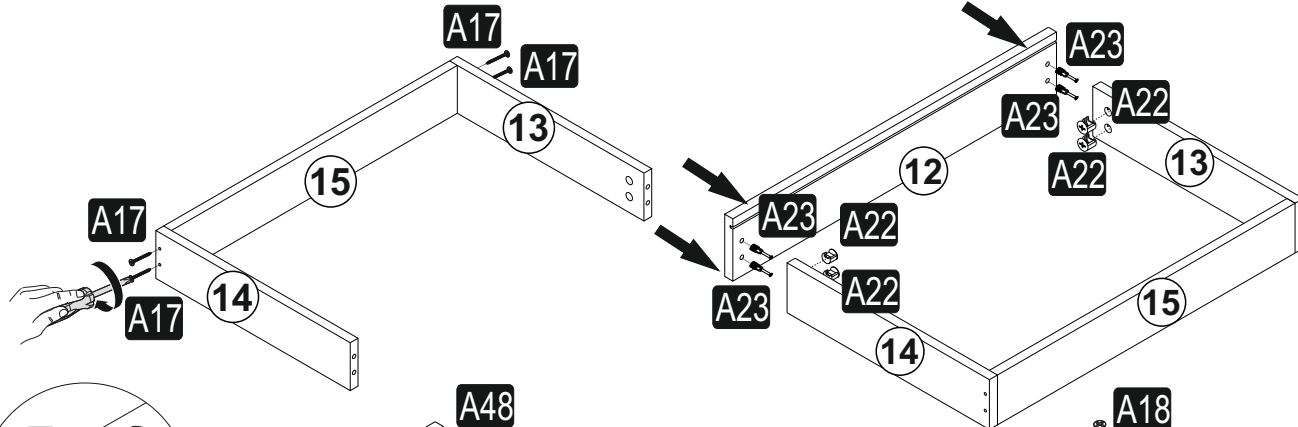

8

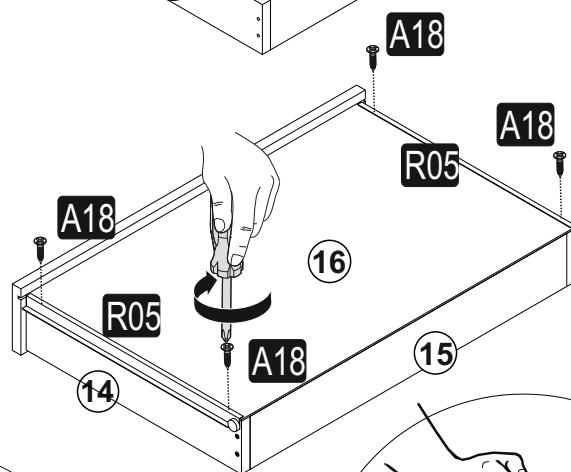
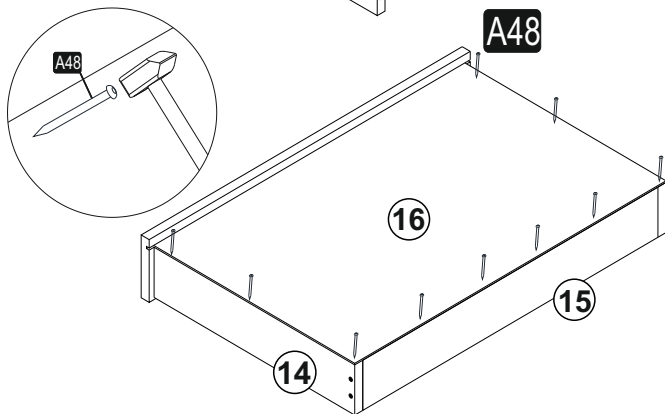


9

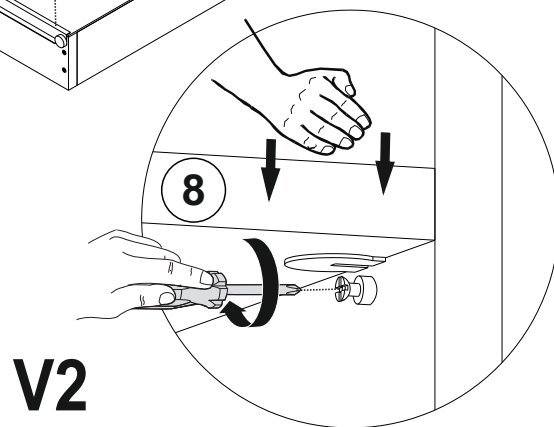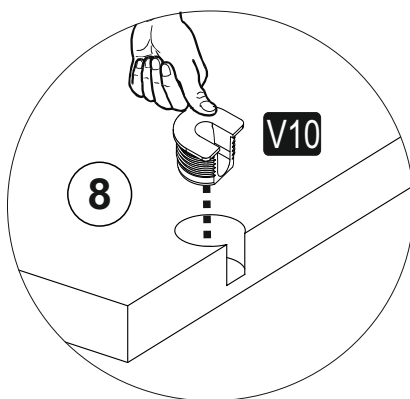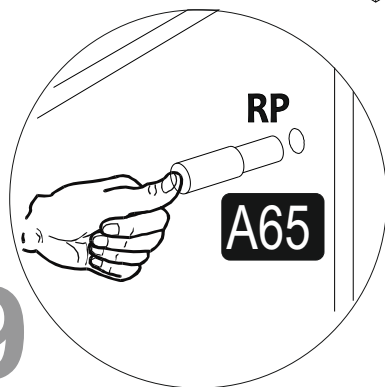


V1

V2

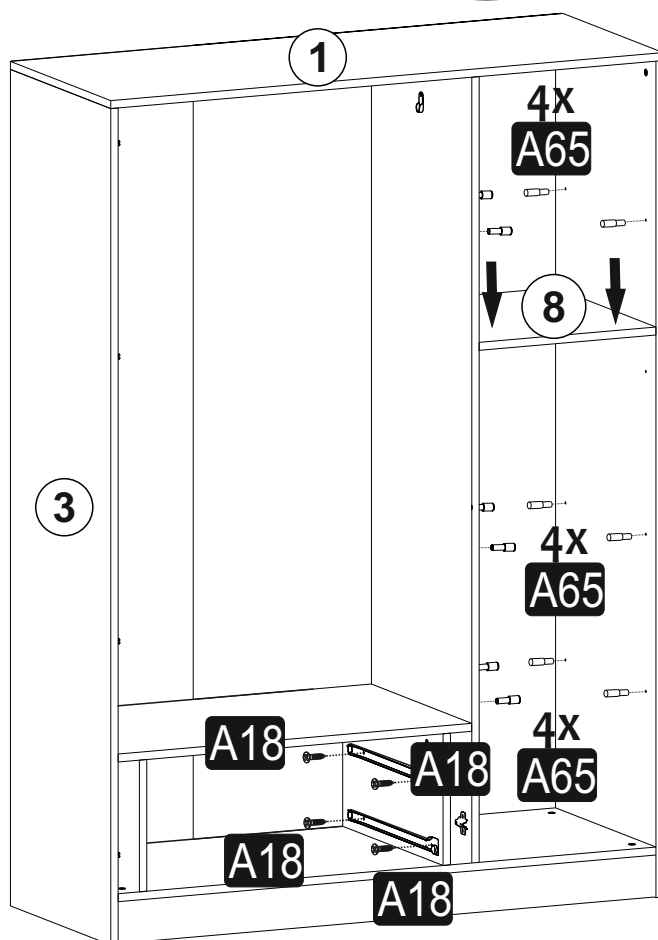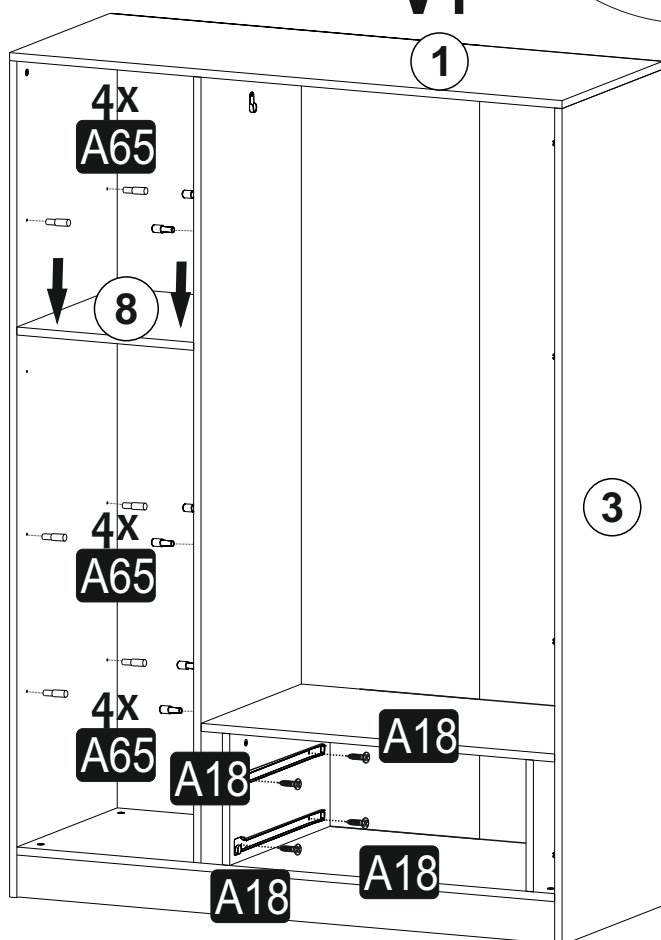

V2

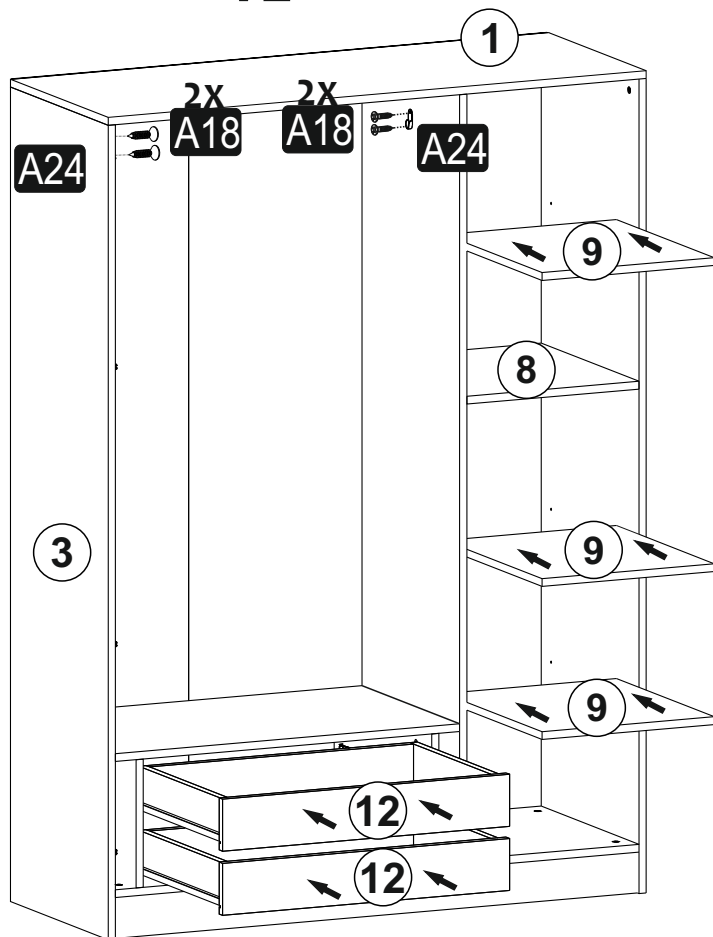

11

