


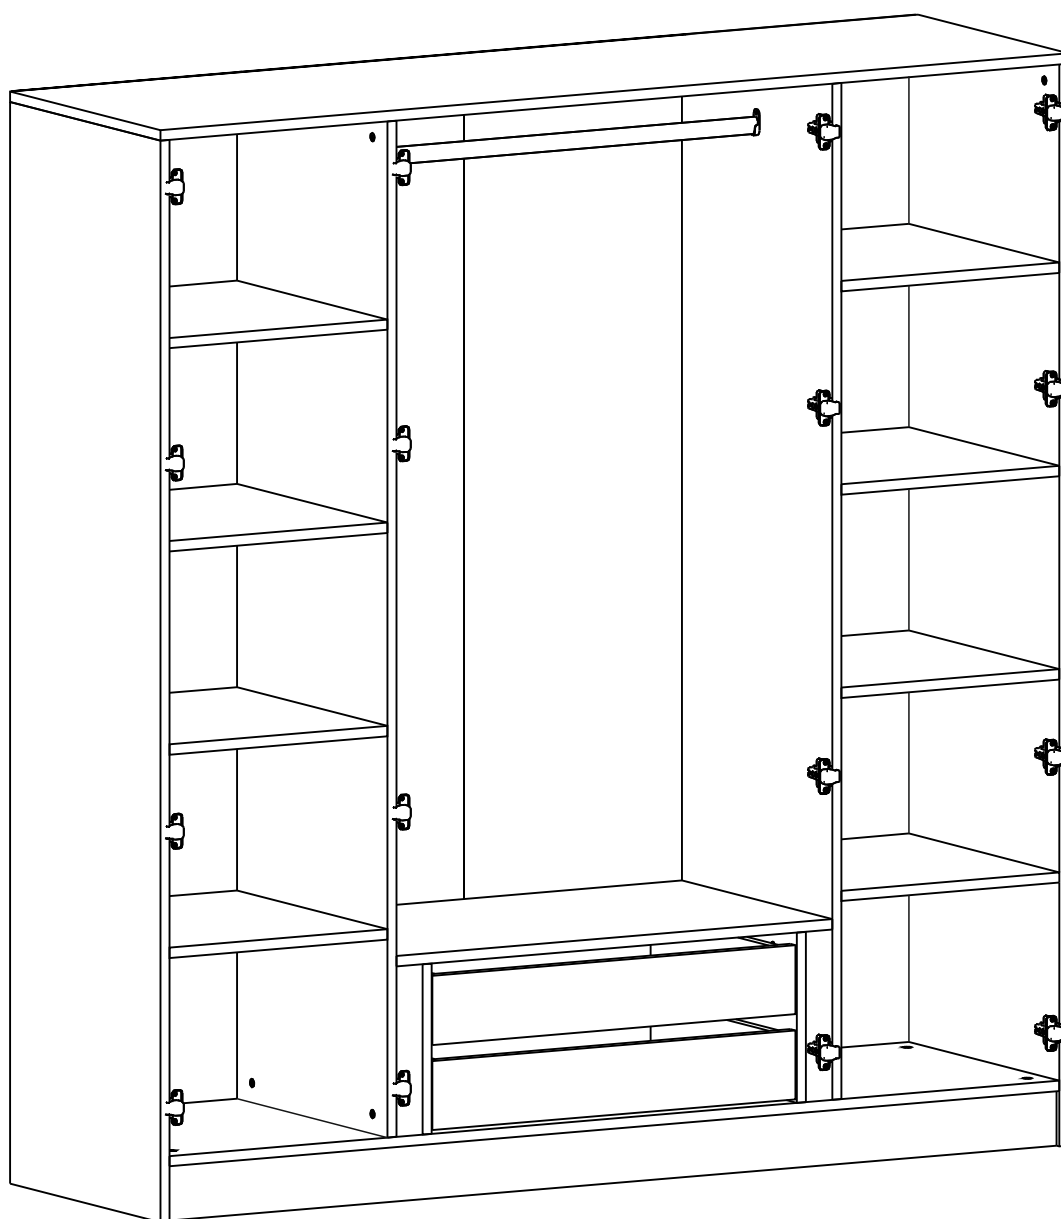
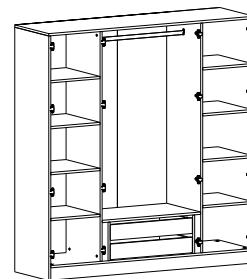
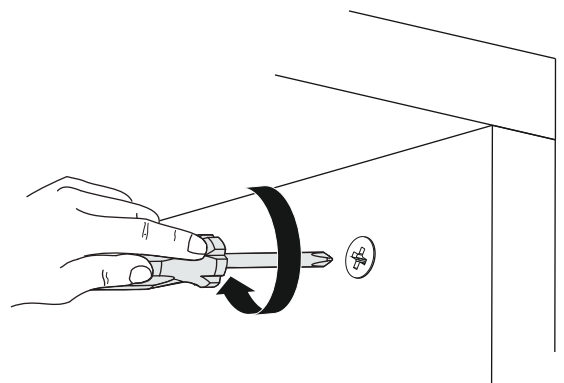
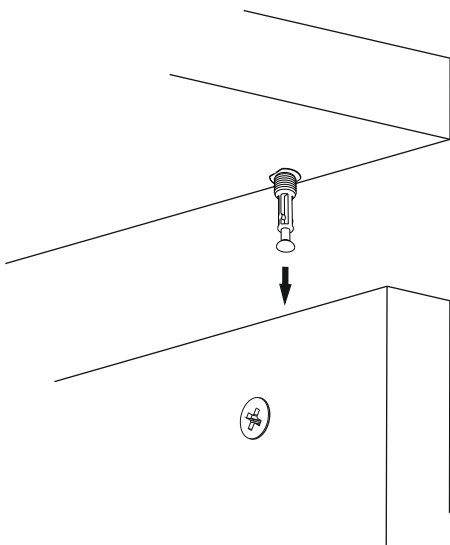
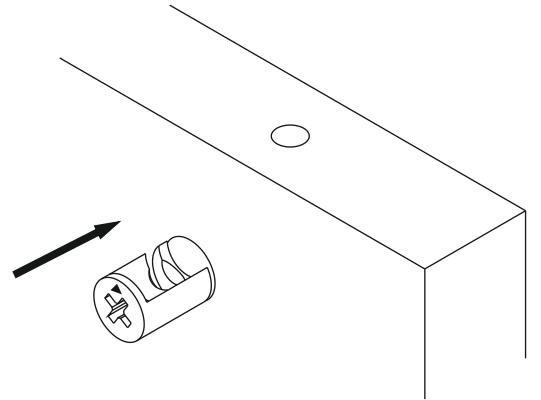
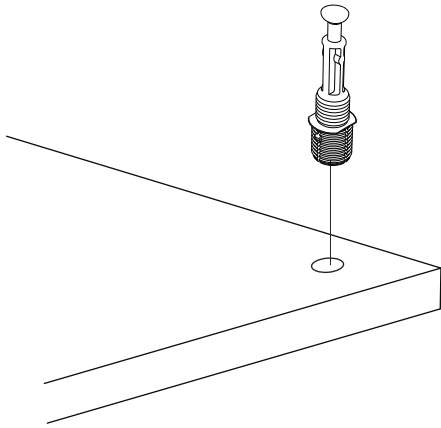






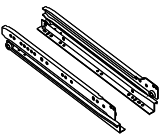



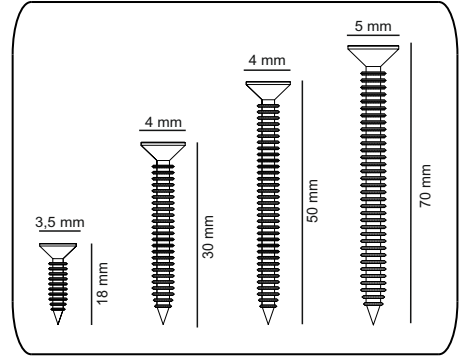



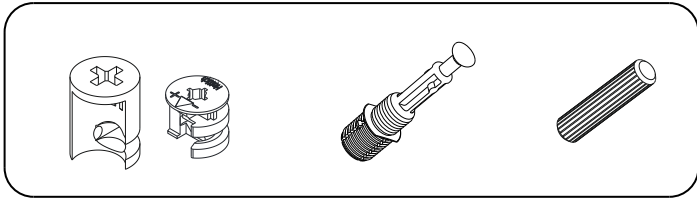


# MEDWAY TIDEWAY KLEIDERSCHRANK MIT 4 TÜREN

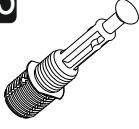





# MONTAGE ZUBEHÖRTEILE
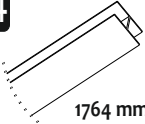
<b>A23</b>  <b>44x</b>	<b>A22</b>  <b>44x</b>	<b>A06</b> 18 mm  DORE <b>32x</b>	<b>A04</b>  <b>24x</b>	<b>A17</b> 4x50  <b>8x</b>
<b>C01</b>  <b>16x</b>	<b>C04</b>  <b>16x</b>	<b>R05</b> 45 cm  <b>2x</b>	<b>A24</b>  <b>2x</b>	<b>A55</b> 856 mm  <b>1x</b>
<b>V10</b> 20x14  <b>12x</b>	<b>V11</b> 5x13  <b>12x</b>	<b>A18</b> 3,5x18  <b>88x</b>	<b>A48</b>  <b>60x</b>	<b>A65</b>  <b>24x</b>
<b>A64</b>  1764 mm <b>1x</b>				


# GESAMTANSICHT

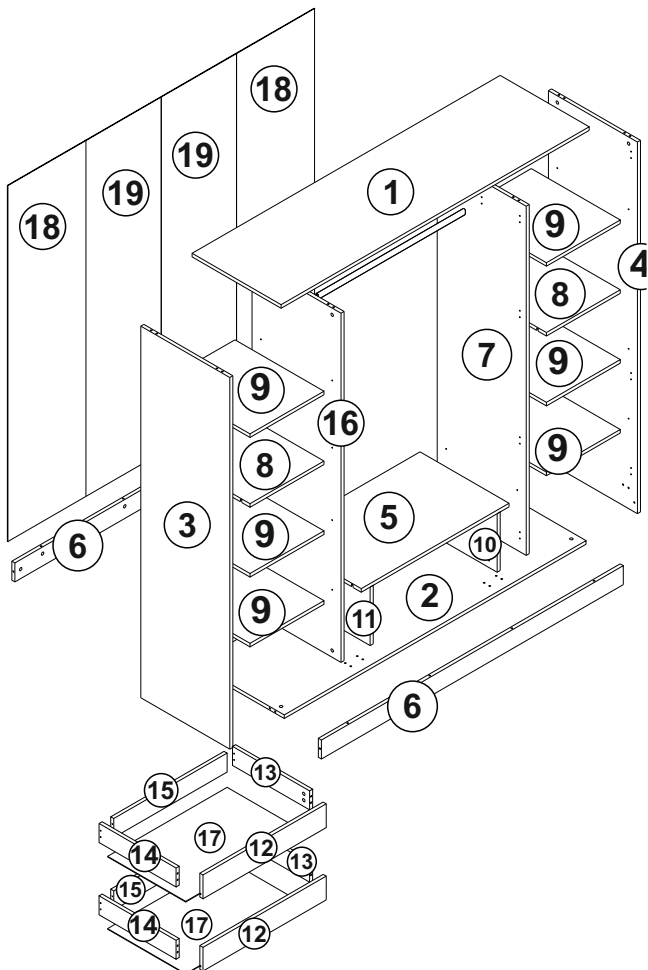


3

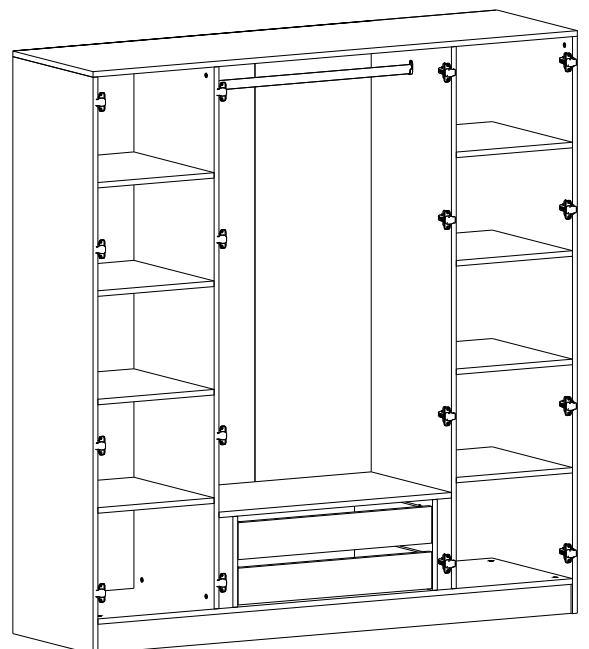


1

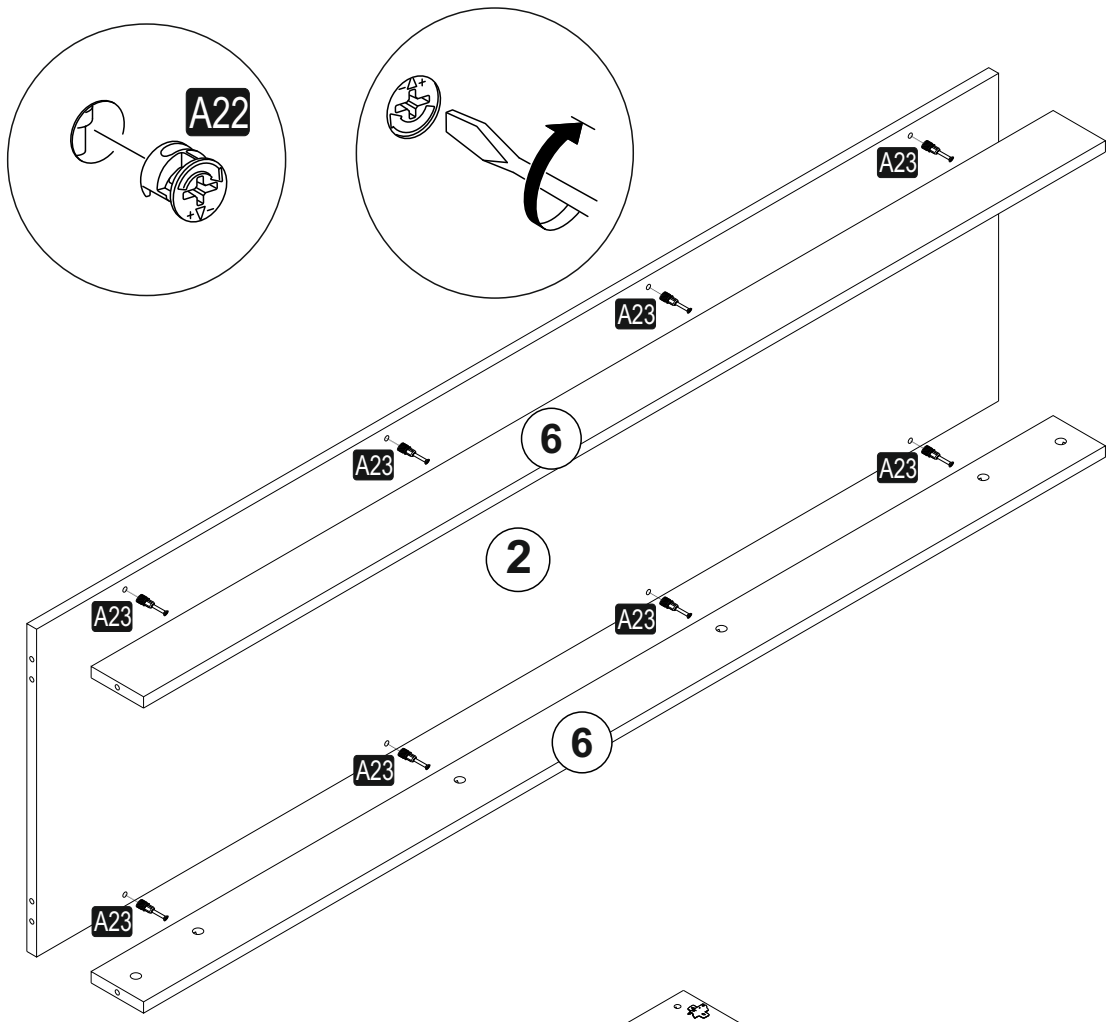


2

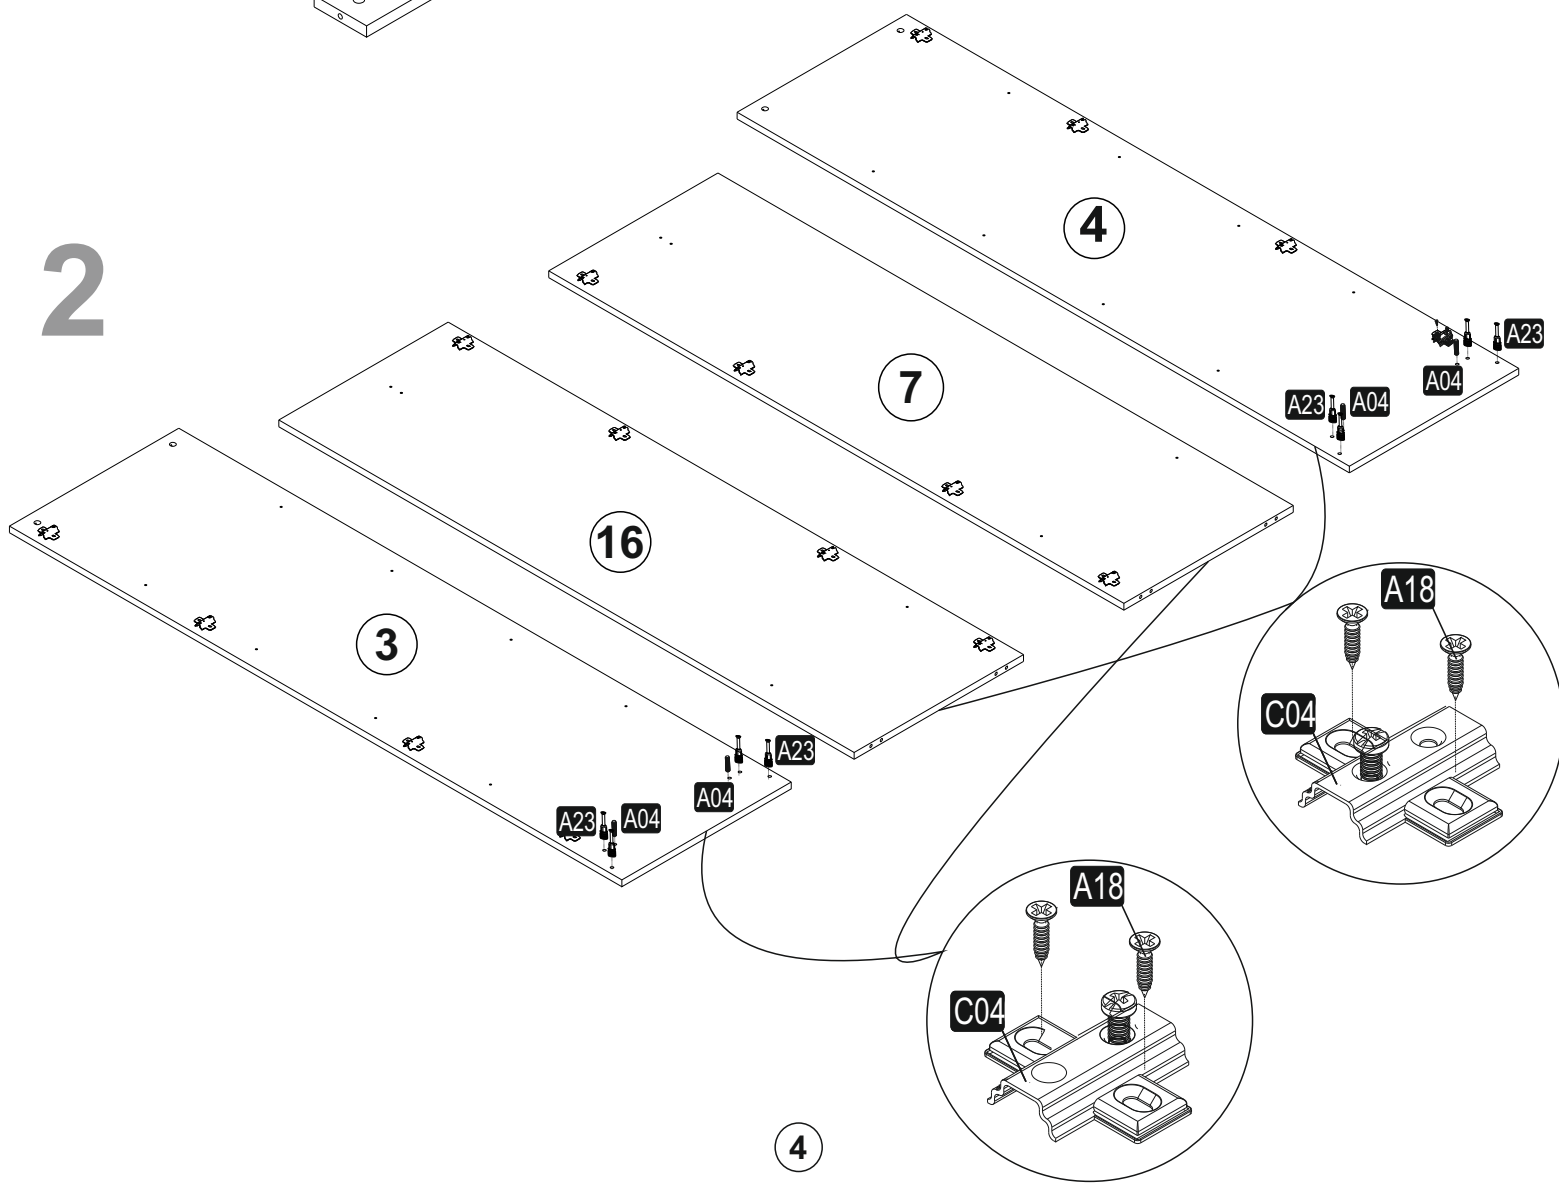


3

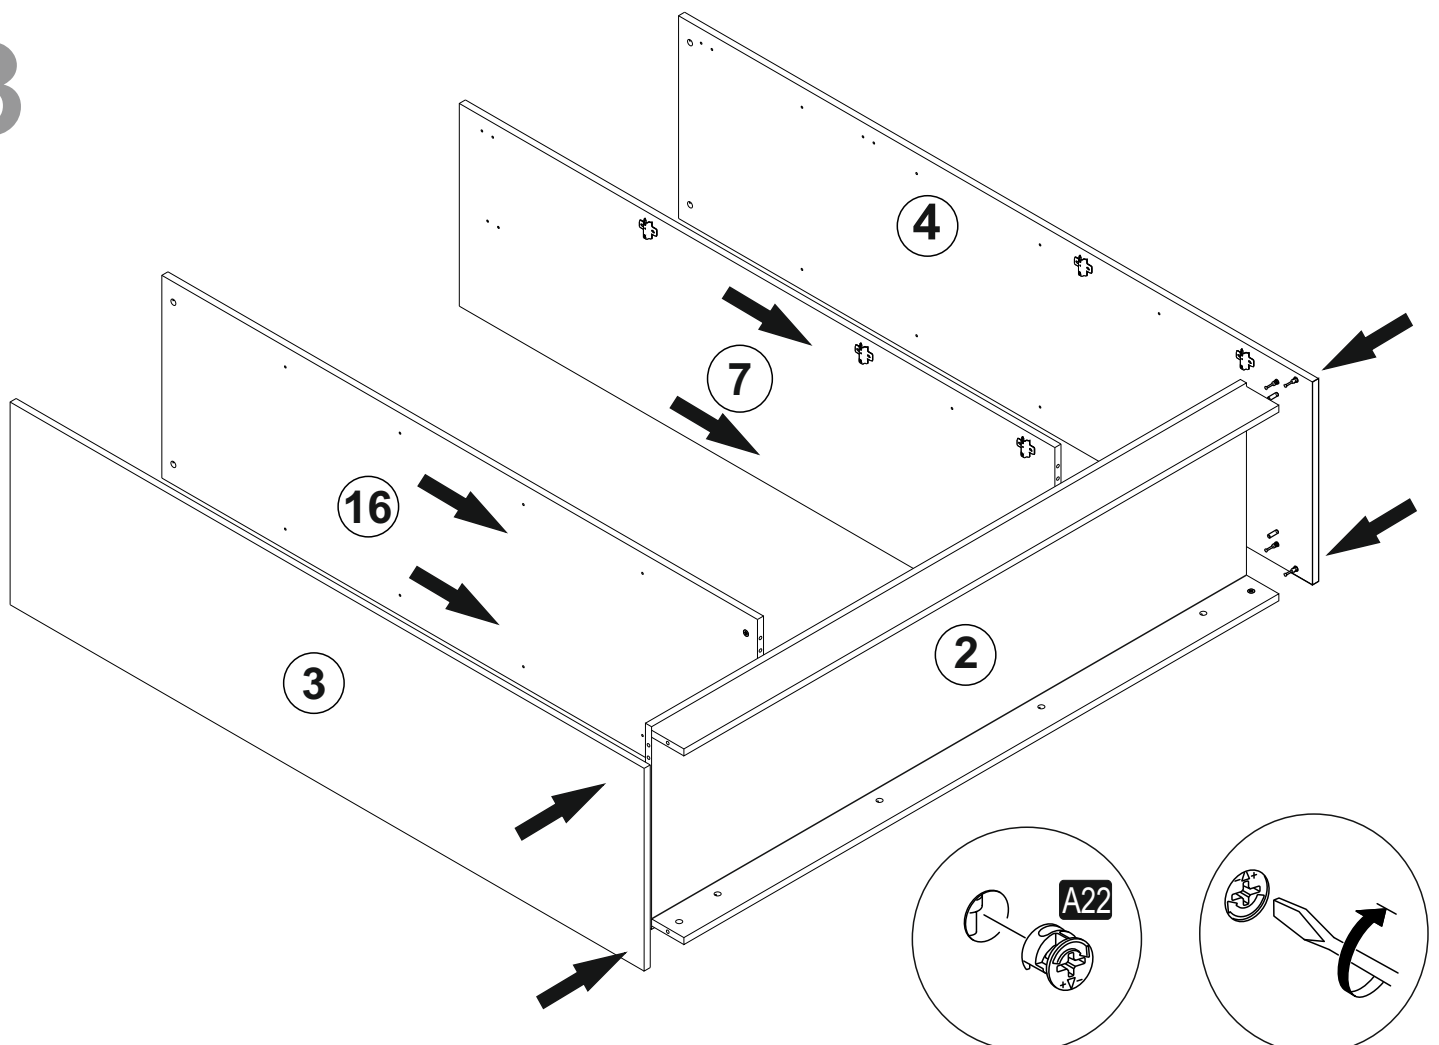


4

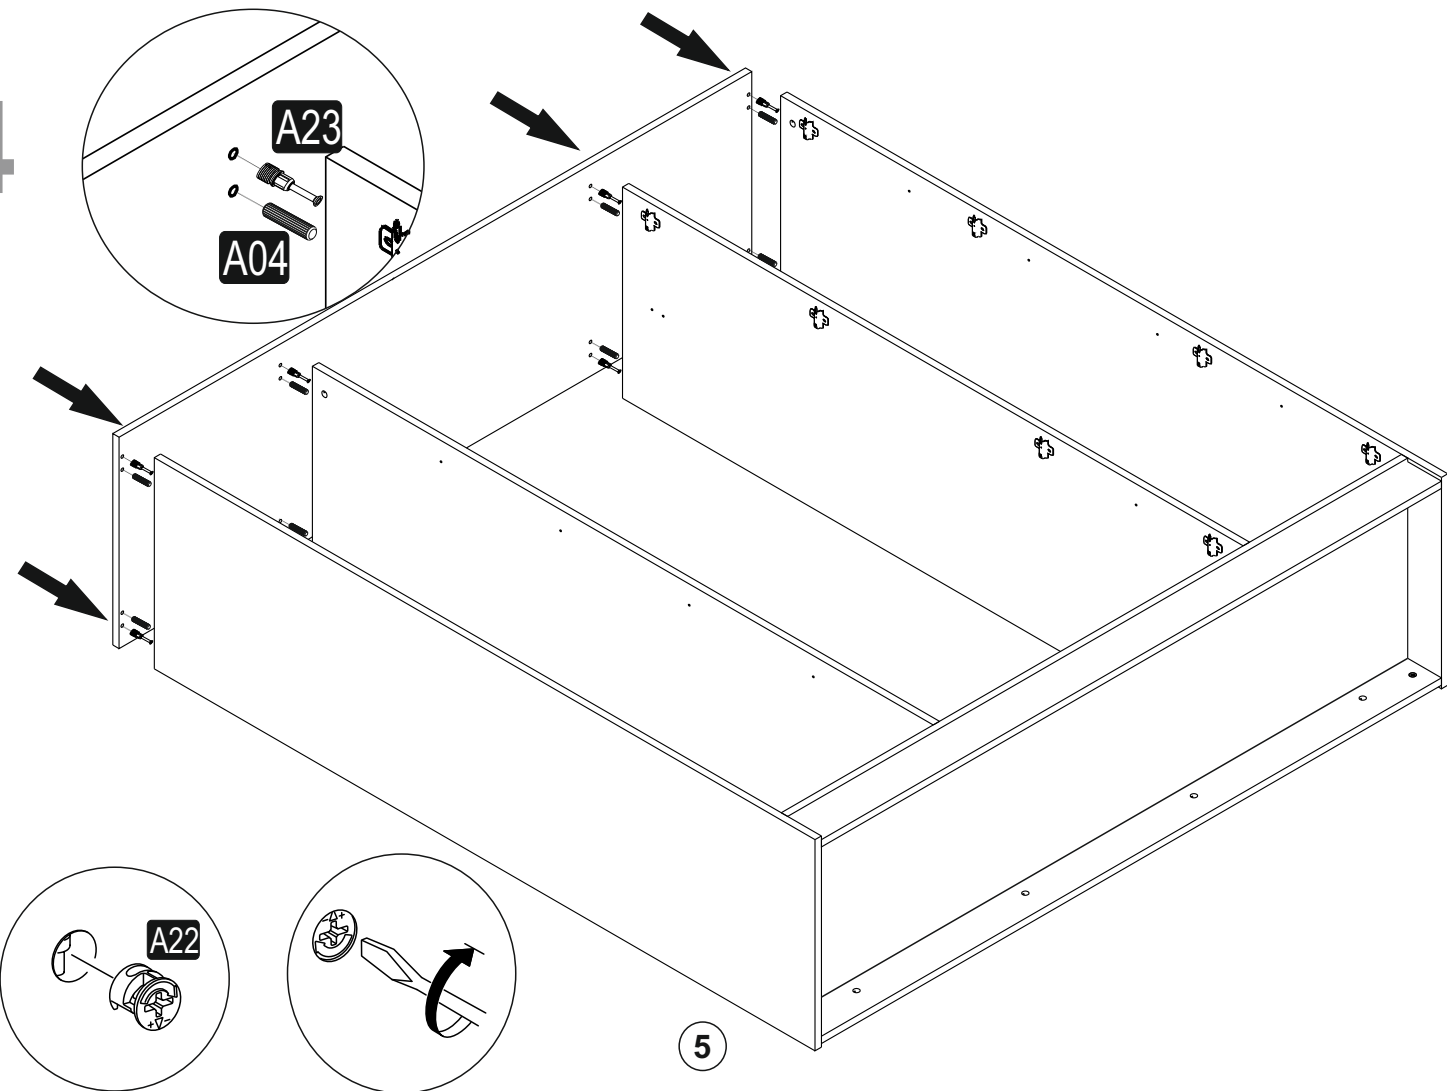


5

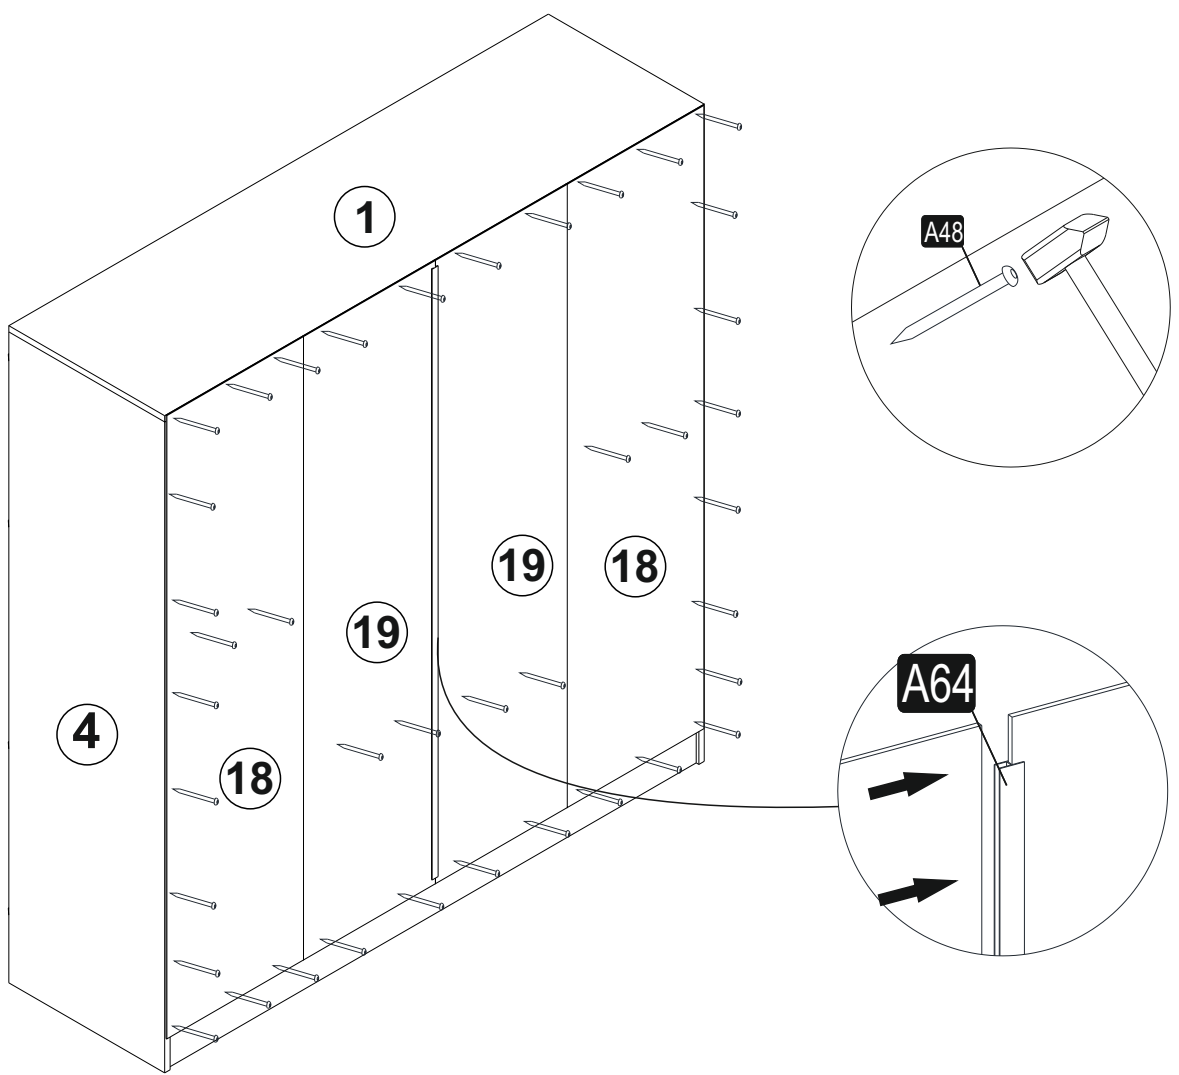


6

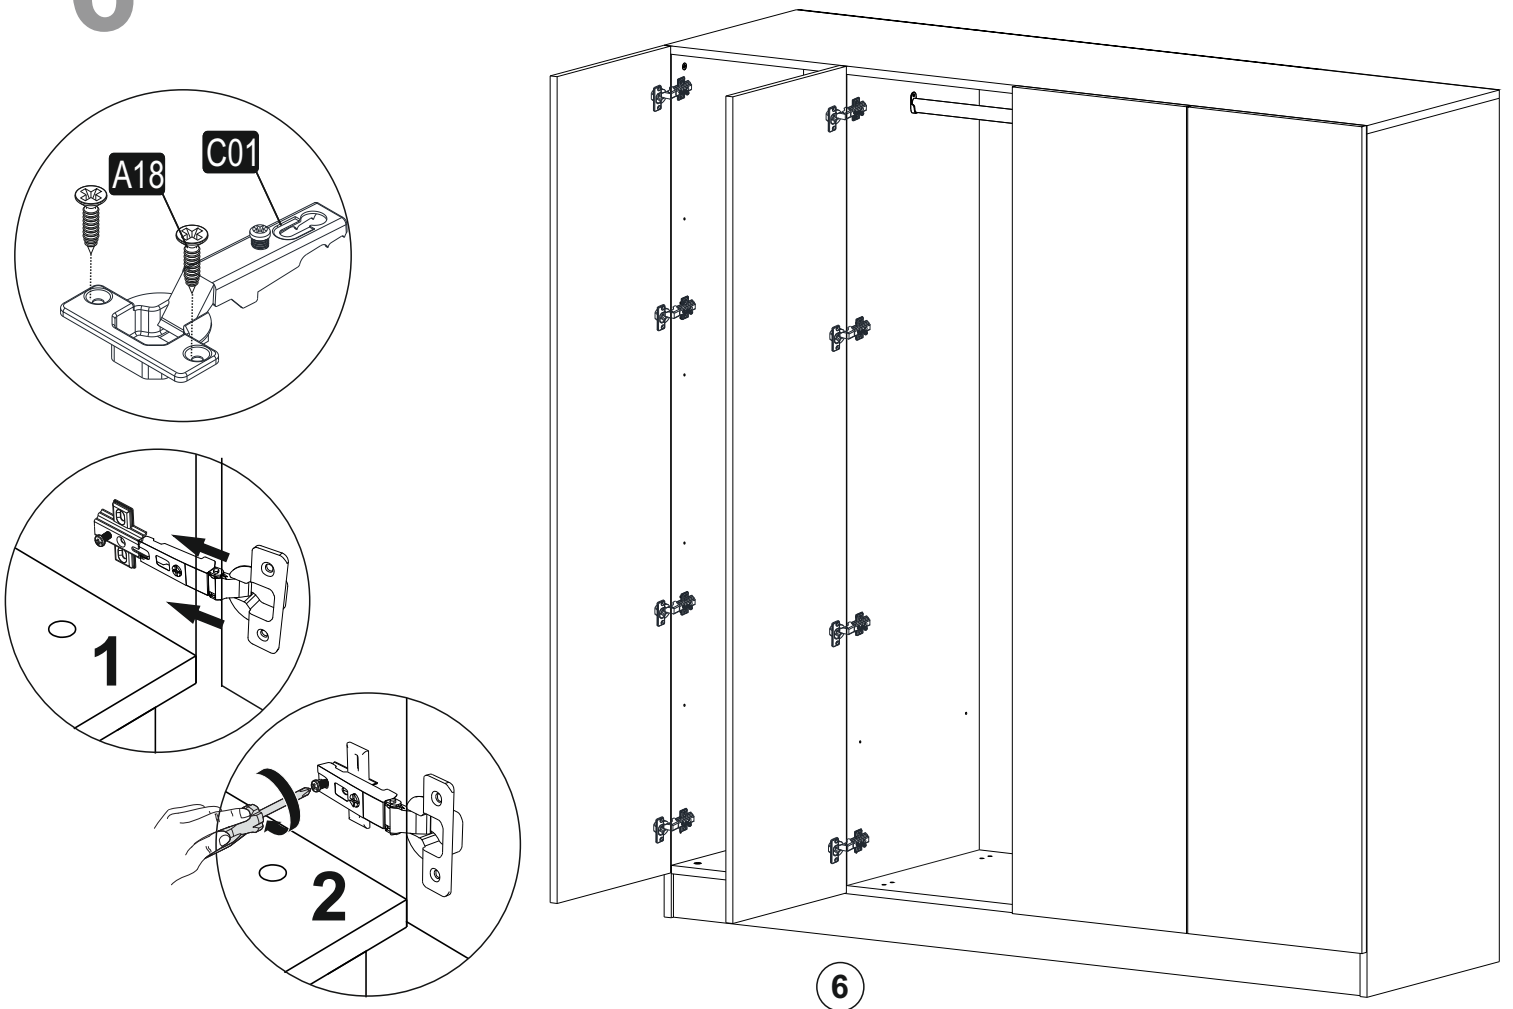


7

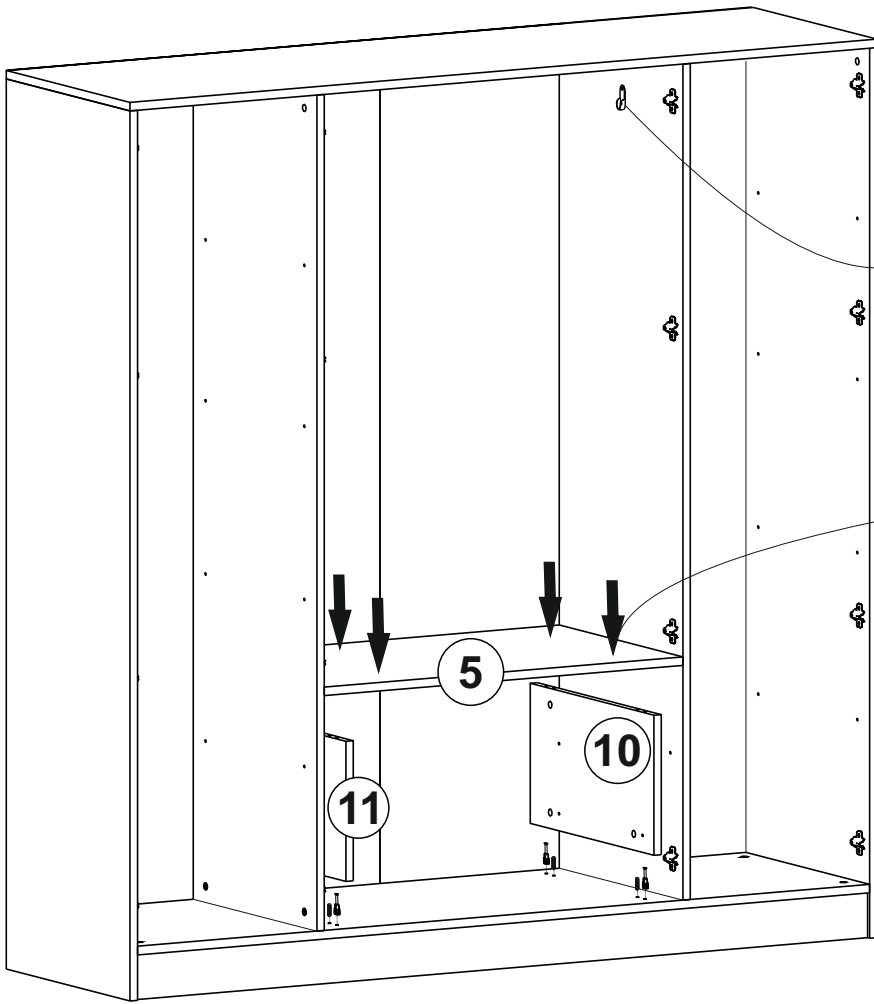


8

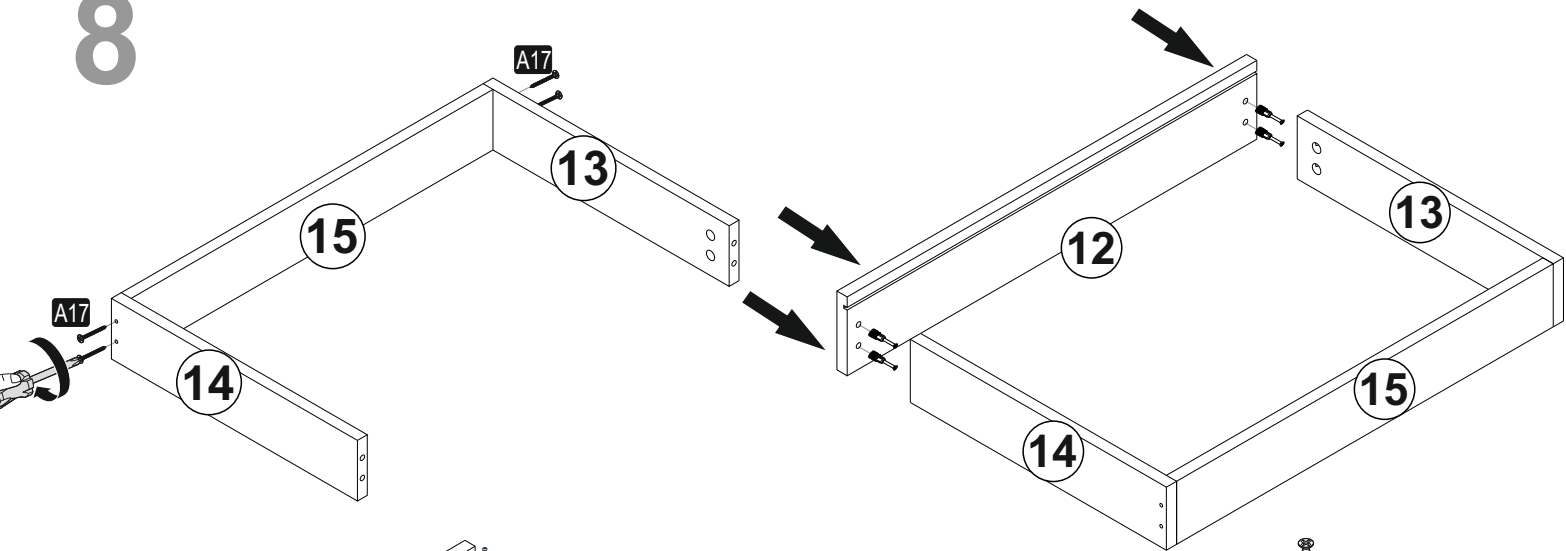


9

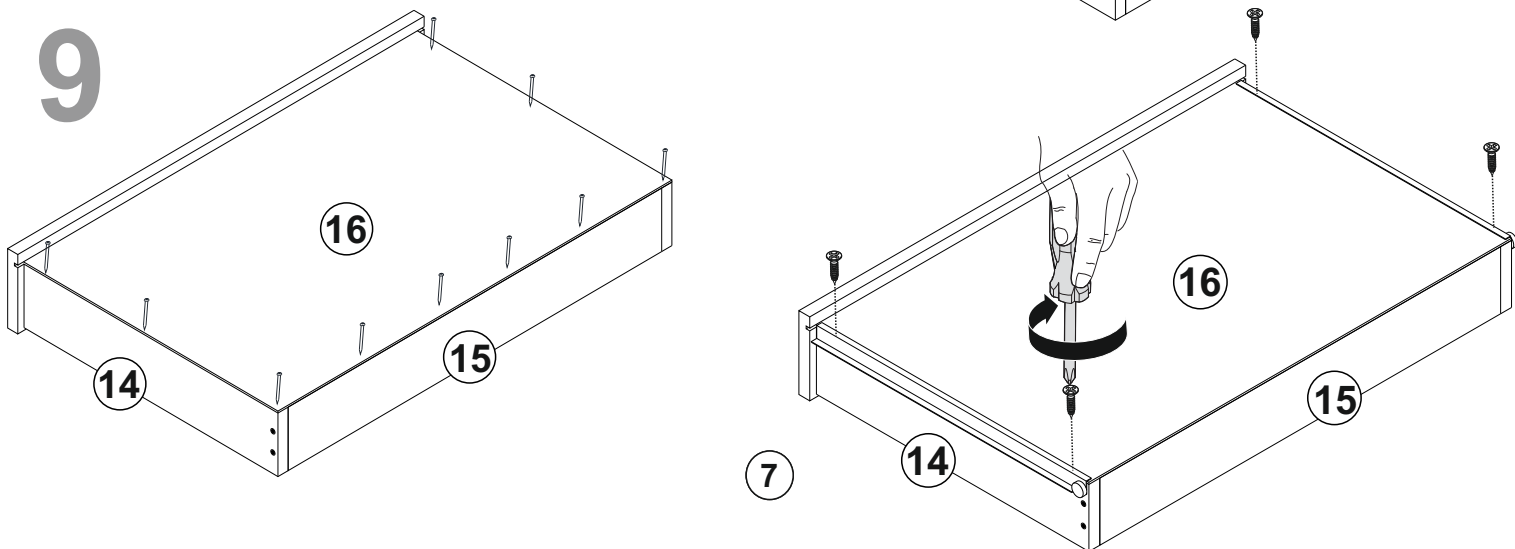

# 10

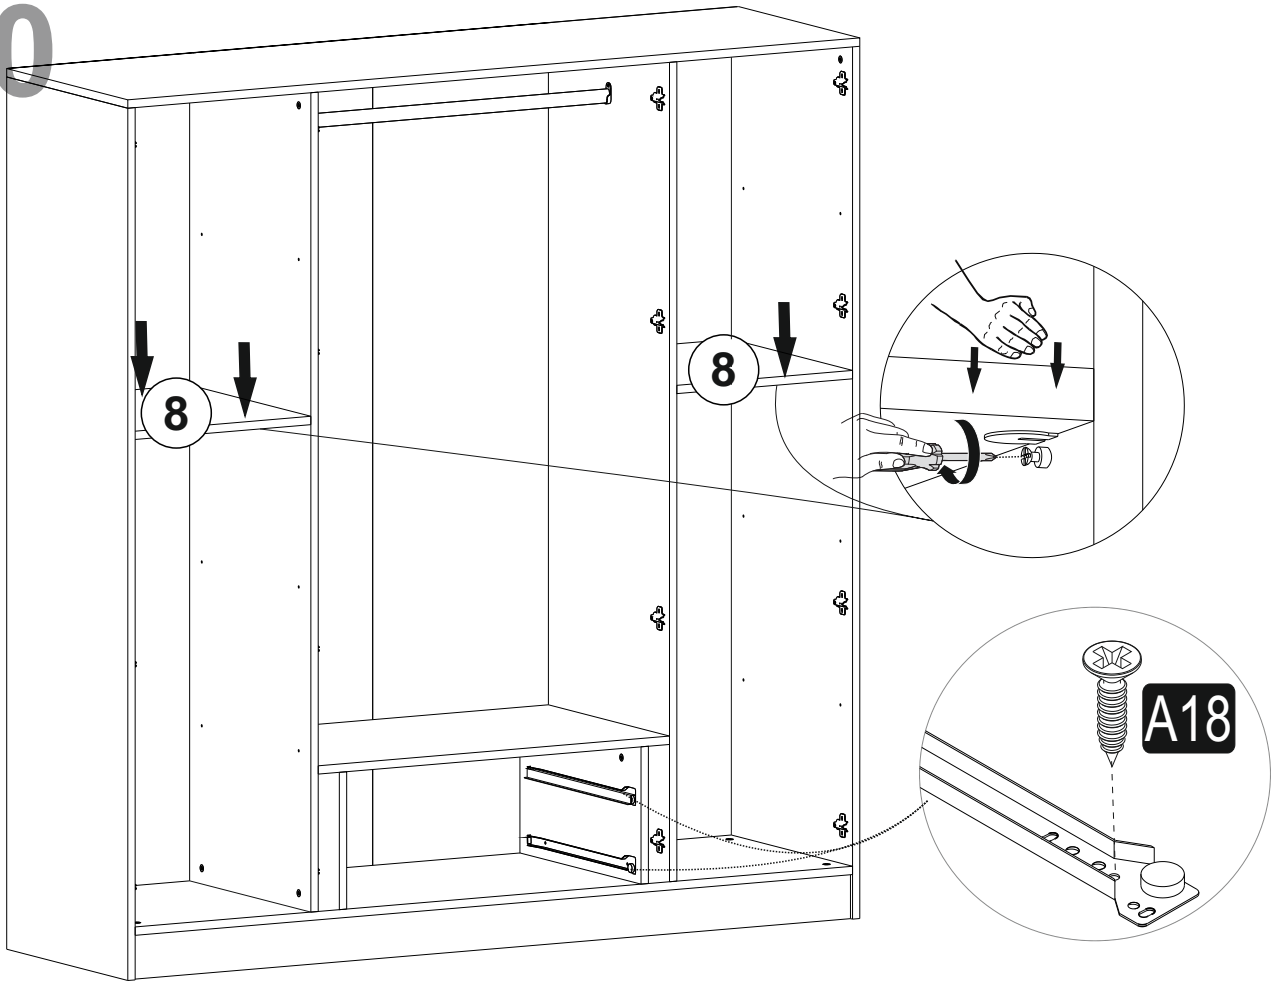

# 11

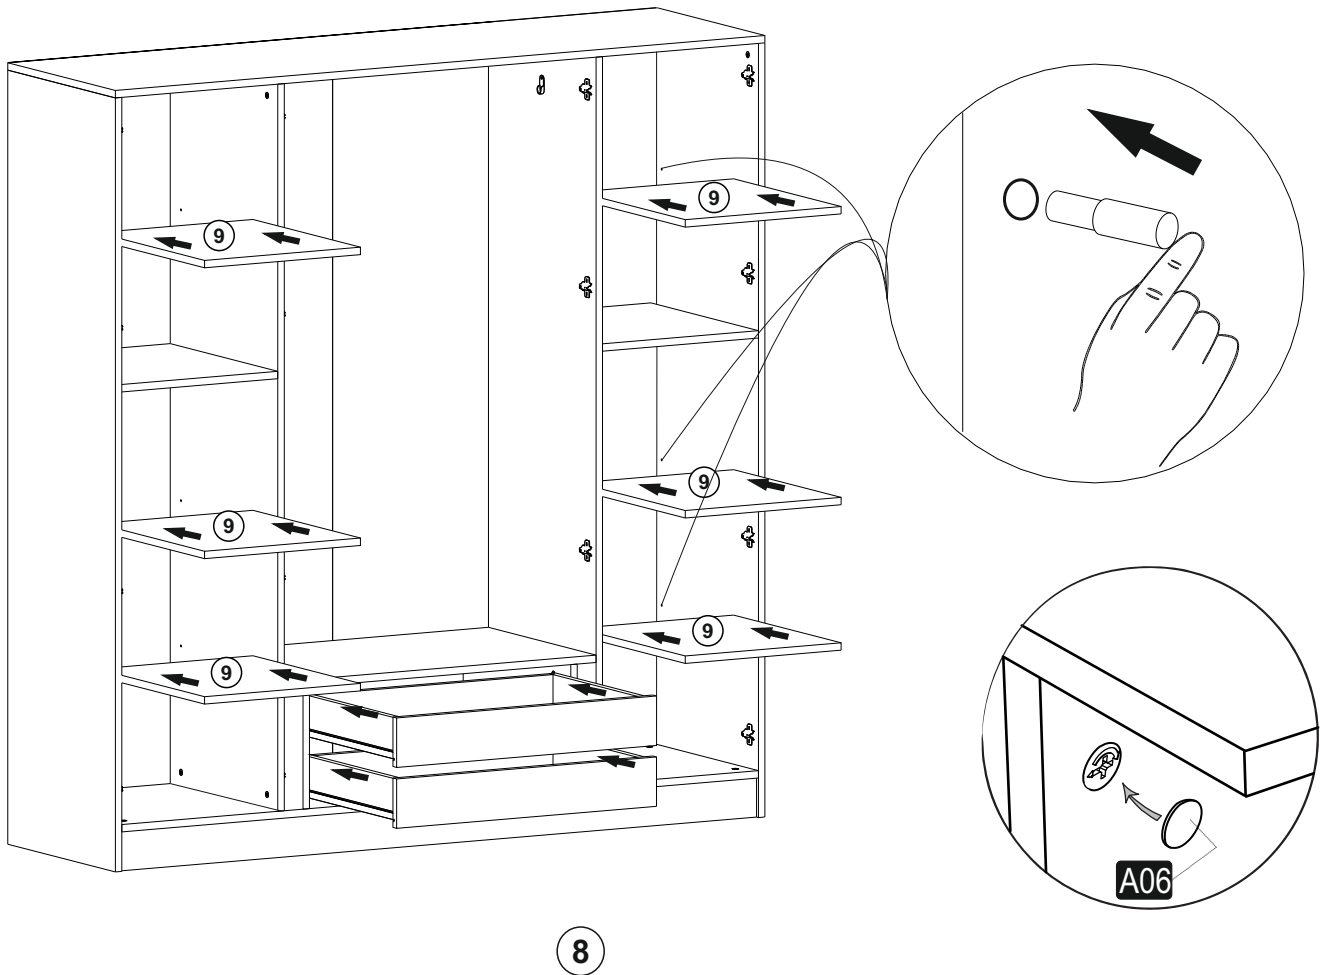

8